

GV-Hybrid LPR Camera 10R

User's Manual



Before attempting to connect or operate this product,
please read these instructions carefully and save this manual for future use.

HLPRCAM10RV10-A



© 2012 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate.

GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained herein. Features and specifications are subject to change without notice.

GeoVision, Inc.

9F, No. 246, Sec. 1, Neihu Rd.,

Neihu District, Taipei, Taiwan

Tel: +886-2-8797-8377

Fax: +886-2-8797-8335

<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and GV series products are trademarks of GeoVision, Inc. *Windows* and *Windows XP* are registered trademarks of Microsoft Corporation.

September 2012

Contents

Naming Definition	iv
Note for Connecting to GV-System	iv
Note for Installing Camera Outdoor	iv
Chapter 1 Introduction.....	1
1.1 Overview.....	1
1.2 System Requirements.....	2
1.3 Packing List	3
1.4 Overview.....	4
1.5 Device Installation.....	5
1.5.1 Installation Guidelines	5
1.5.2 Installing the Camera	7
1.6 Connecting the Camera	11
Chapter 2 Getting Started.....	13
2.1 Looking Up the IP Address.....	13
2.2 Accessing Your Surveillance Images	16
2.3 Configuring the Basics	17
Chapter 3 Guest Mode and Live View Panel.....	18
3.1 The Live View Window.....	19
3.2 The Control Panel of the Live View Window.....	21
3.3 Snapshot of a Live Video	24
3.4 Video Recording	24
3.5 Picture-in-Picture and Picture-and-Picture View.....	25
3.6 Alarm Notification.....	27
3.7 Video and Audio Configuration.....	28
3.8 Remote Configuration	29
3.9 Camera Name Display	29
3.10 Image Enhancement.....	29
Chapter 4 Administrator Mode.....	30
4.1 Video & Motion	32
4.1.1 Video Settings	33
4.1.2 Motion Detection	36
4.1.3 Privacy Mask.....	37
4.1.4 Text Overlay	38
4.1.5 Tampering Alarm	39
4.2 Events & Alerts.....	40
4.2.1 E-mail.....	41

4.2.2	FTP	43
4.2.3	Center V2	44
4.2.4	VSM	46
4.2.5	GV-Video Gateway / GV-Recording Server	48
4.2.6	RTSP / 3GPP	50
4.3	Monitoring	51
4.4	Network	52
4.4.1	LAN Configuration	52
4.4.2	Advanced TCP/IP	54
4.4.3	IP Filtering	57
4.4.4	SNMP Settings	58
4.5	Management	60
4.5.1	Date and Time Settings	60
4.5.2	GPS Maps Settings	62
4.5.3	User Account	64
4.5.4	Log Information	65
4.5.5	Tools	66
4.5.6	Language	68
Chapter 5	Advanced Applications	69
5.1	Upgrading System Firmware	69
5.1.1	Using the Web Interface	70
5.1.2	Using the GV IP Device Utility	71
5.2	Backing Up and Restoring Settings	74
5.3	Verifying Watermark	76
5.3.1	Accessing AVI Files	76
5.3.2	Running Watermark Proof	76
5.3.3	The Watermark Proof Window	77
Chapter 6	DVR Configurations	78
6.1	Setting Up IP Cameras	79
6.1.1	Customizing Camera Settings	82
6.2	Remote Monitoring with Multi View	84
6.3	Remote Monitoring with E-Map	86
Chapter 7	CMS Configurations	88
7.1	Center V2	88
7.2	VSM	90
7.3	Dispatch Server	91
Chapter 8	Smart Device Connection	92
8.1	Android	93

8.1.1	Connecting to GV-Hybrid LPR Camera 10R	93
8.1.2	Accessing Live View	95
8.2	Apple	97
8.2.1	Connecting to GV-Hybrid LPR Camera 10R	98
8.2.2	Accessing Live View	99
Specifications		101
Appendix		105
A.	The CGI Command	105
B.	RTSP Protocol Support	106
C.	Settings for Internet Explorer 8	107

Naming Definition

GV-System	GeoVision Analog and Digital Video Recording Software. The GV-System also refers to GV-Multicam System , GV-NVR System , GV-DVR System and GV-Hybrid DVR System at the same time.
------------------	---

Note for Connecting to GV-System


The GV-Hybrid LPR Camera 10R is designed to work with and record on GV-System, a hybrid or digital video management system.

Once the camera is connected to the GV-System, the resolution set on the GV-System will override the resolution set on the camera's Web interface. You can only change the resolution settings through the Web interface when the connection to the GV-System is interrupted.


Note for Installing Camera Outdoor

When installing the GV-Hybrid LPR Camera 10R outdoor, mind the following:

1. Set the camera above the junction box to prevent water from entering the camera along the cables.

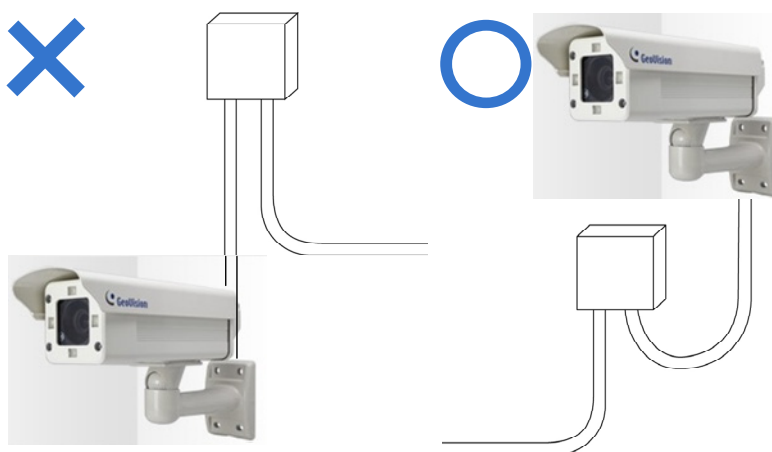

2. Waterproof the PoE, power and TV-out cables with waterproof silicon rubber or the like.

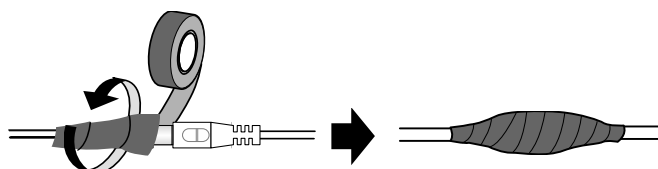

3. To prevent the lens from fogging up, replace the silica gel bag every time you open the camera, and conceal the gel bag in camera within 2 minutes of exposing to open air. The silica gel bag loses its effectiveness when the dry camera is opened.
4. The camera casing can be hot due to its IR LED. Make sure you unplug the power cable and allow the camera casing to cool down before handling the camera.

Chapter 1 Introduction

1.1 Overview

The GV-Hybrid LPR Camera 10R is a 1.3 MP B/W network camera designed solely for recognition of reflective license plates on vehicles traveling at 120 km/hr (74.6 mph) or less. With its high-power LEDs and intelligent IR, the camera is able to automatically adjust its shutter speed to the scene and produce clear license plate capture under low-light conditions. Under certain conditions, the GV-Hybrid Camera 10R can capture up to two lanes in a single shot. It is also able to work in environments with extreme temperatures from as low as -40°C/-40°F up to 50°C/122°F.

The GV-Hybrid LPR Camera 10R can be easily configured through its Web interface and you can record and play back recordings using the free GV-NVR software included in the standard package.

Features:

- 1.3 megapixel B/W progressive scan CMOS
- Stream 1 from MJPEG or H.264
Stream 2 from H.264 or MJPEG
- Up to 30 fps at 1280 x 1024
- IP66 rating
- Built-in heater and fan
- Support for TV-out
- Two-way audio
- Motion detection
- Tampering alarm
- Privacy mask
- Text overlay
- IP address filtering
- Power supplied through PoE (IEEE 802.3 at++)
- Support for iPhone, iPad, Android and 3GPP
- 31 languages on Web interface

1.2 System Requirements

To access the camera functions and settings through Web browser, ensure your PC is in good network connection and use one of the following Web browsers:

- Microsoft Internet Explorer 7.x or later
- Google Chrome
- Mozilla Firefox
- Safari

Note:

1. For users of **Internet Explorer 8**, additional settings are required. For details, see *Appendix C*.
 2. With non-IE browsers,
 - A. Motion Detection, Text Overlay, two-way audio and GPS map settings are not supported.
 - B. The Play function is only available on the live view window (Figure 3-2)
 - C. RTSP streaming must be kept as enabled. For more details, see *4.3.8 RTSP / 3GPP*.
-

1.3 Packing List

- GV-Hybrid LPR Camera 10R
- Screw Anchor x 4
- Screw x 4
- Washer x 4
- Big Torx Wrench
- Small Torx Wrench
- Silica Gel Bag x 2 (1 already installed)
- Sticker x 2
- GV-PA481



- GV-PA481 Power Cord
- GV-Hybrid LPR Camera 10R Software DVD
- GV-NVR Software DVD

1.4 Overview

To access the functional panel of the GV-Hybrid LPR Camera 10R, follow the section below to remove its camera cover first.

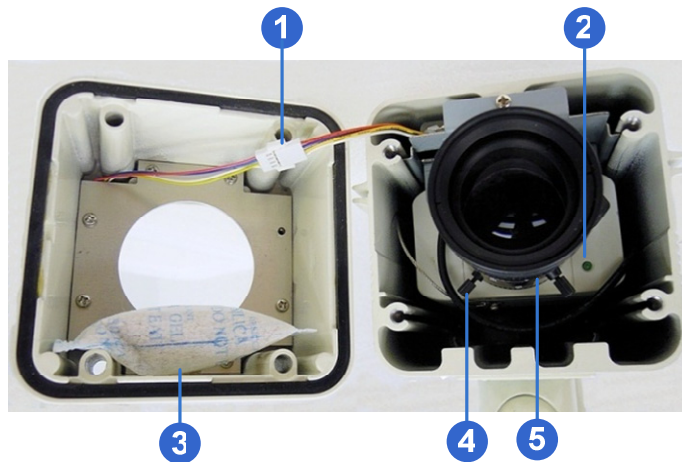


Figure 1-1

No.	Name	Description
1	IR power plug	Supplies power to the built-in IR LEDs.
2	Status LED	Turns on when the unit is ready for use.
3	Silica gel bag	Keeps the camera housing dry.
4	Zoom Screw	Adjusts the zoom of the camera.
5	Focus Screw	Adjusts the focus of the camera.

1.5 Device Installation

1.5.1 Installation Guidelines

To produce quality image and to avoid software recognition errors, make sure you adhere to the following guidelines when installing your GV-Hybrid LPR Camera 10R.

- **Install the camera in the front of the vehicle (Recommended)**

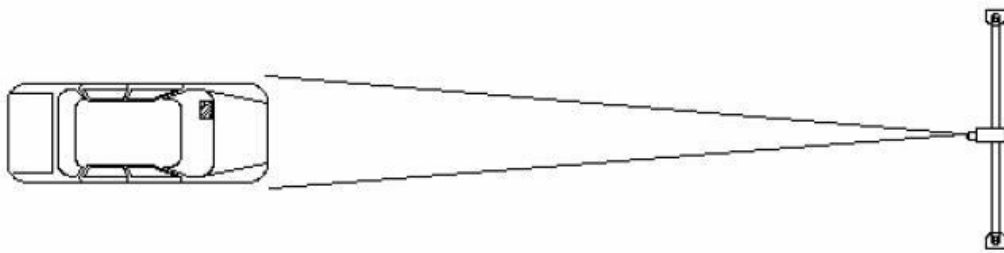


Figure 1-2

- The full width of the vehicle shall fill up the captured image. For example:



- The captured plate characters shall be approximately 30 to 35 pixels.

Tip: To check the height of the captured plate characters, copy and paste the captured characters, e.g. **01-D-8613** into Paint and save it in BMP format. Right click the BMP file, select **Properties** and click the **Summary** tab to locate the Height information.

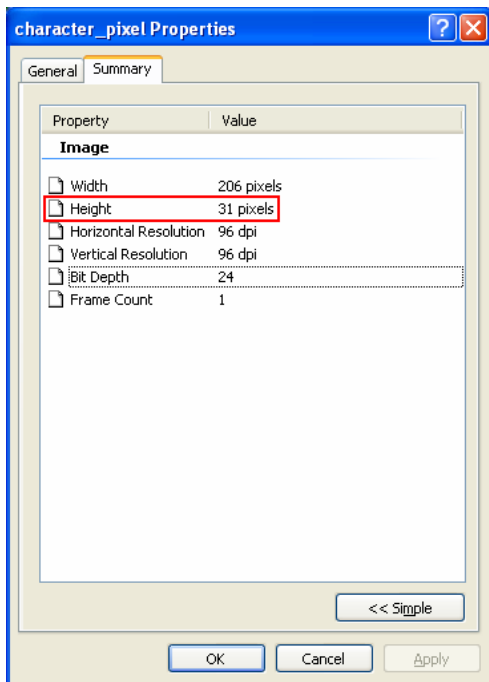


Figure 1-3

- **Install the camera at an appropriate distance, height and angle**

- The camera shall be within 5 to 50 meters to the vehicle.
- The camera shall be installed 3 to 9 meters from the ground.
- The camera setup angle should be within 30 degrees.

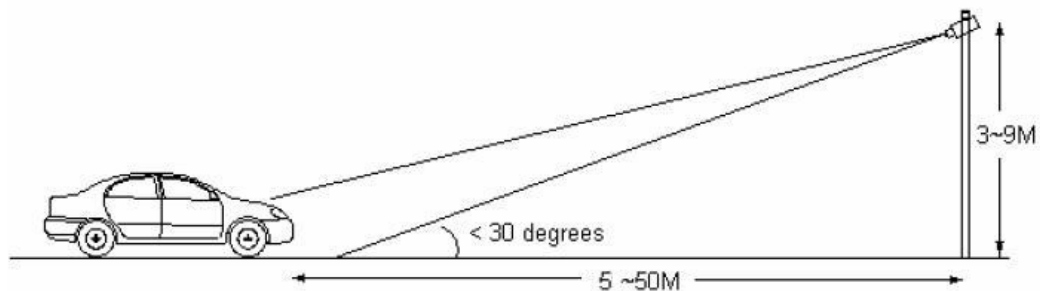


Figure 1-4

- **Installing the camera on the side**
 - To avoid capturing unnecessary contents in the image, the camera should be installed in a higher position to capture the front part of the vehicle only. The camera setup angle should also be within 15 degrees.



Figure 1-5

1.5.2 Installing the Camera

After you have read through the installation guides and chosen an installation site, follow the steps below to install the GV-Hybrid LPR Camera 10R.

1. Mark the installation site and drill four holes for screw anchors.
2. Insert the supplied screw anchors.
3. Secure the camera to the wall using the supplied washers and screws.

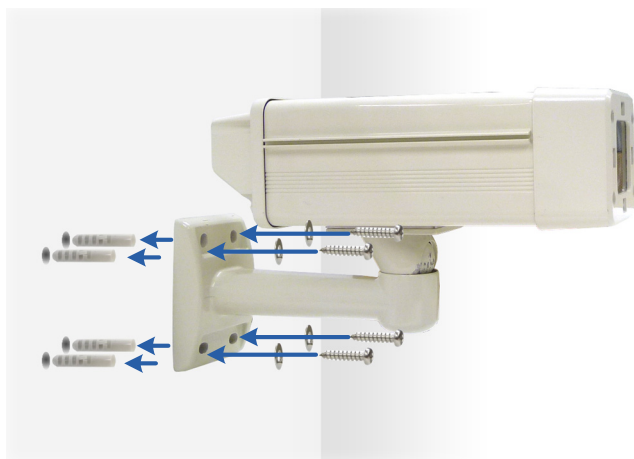


Figure 1-6

4. Connect the camera to the network and supply power via the PoE cable. See 1.6 *Connecting the Camera*.
5. Access the live view. See 2.1 *Accessing the Live View*.

6. Based on the live view, adjust the angle of the camera. Loosen the indicated screw with the supplied big torx wrench and adjust the joint.



Figure 1-7

Tilt Adjustment



Figure 1-8

Pan Adjustment

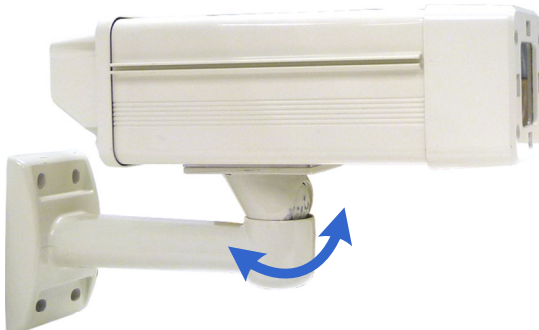


Figure 1-9

7. Based on the live view, adjust the focus and zoom of the camera.
 - A. Unscrew the cover with the supplied small torx wrench.

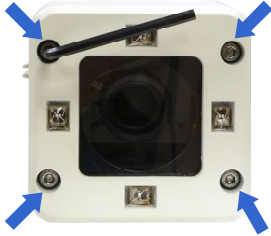


Figure 1-10

- B. Hold the connectors and unplug them.

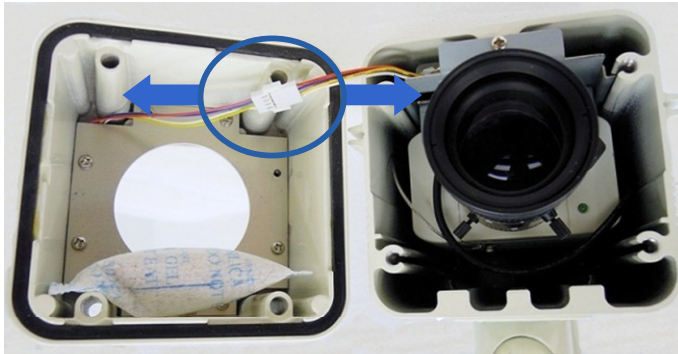


Figure 1-11

Important: Unscrew and remove the cover carefully. Pulling the cover off may cause damages to the inner wiring of the camera.

- C. Adjust the focus and zoom.

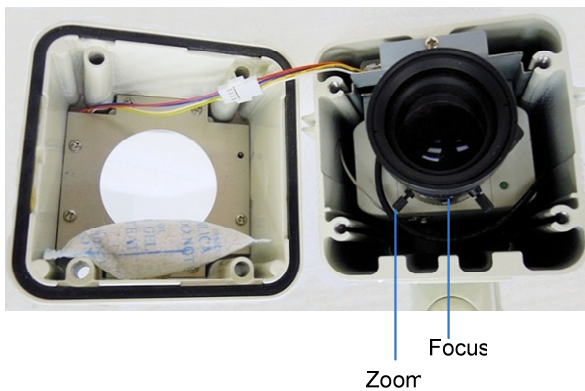


Figure 1-12

8. Replace the silica gel bag. Paste the sticker to the front side of the silica gel bag. Press the sticker several times to make sure it adheres properly. Paste the silica gel bag to the indicated place.

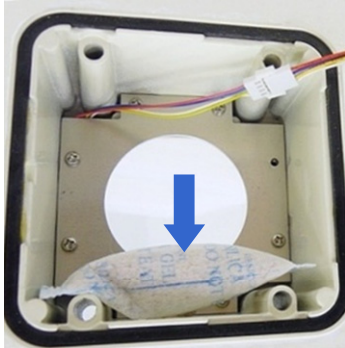


Figure 1-13

Important:

1. Be sure that the silica gel bag is concealed in the camera housing within 2 minutes of exposing to open air.
 2. To prevent the lens from fogging up, you must replace the silica gel bag every time you open the camera. The gel bag loses its effectiveness when the dry camera is opened.
-

9. Refer to step 7 to plug the connectors and secure the camera cover.

1.6 Connecting the Camera

Follow the steps below to connect your GV-Hybrid LPR Camera 10R.

1. Optionally connect a speaker to the green RCA wire and an external microphone to the pink RCA wire.
2. Optionally connect a monitor to the black BNC wire. Enable the TV-Out function by selecting the correct signal format at the TV Out field on the Web interface. See *4.1.1 Video Settings*.
3. Connect the camera's cable to the GV-PA481 PoE adapter as illustrated below. The power and network will be supplied simultaneously.

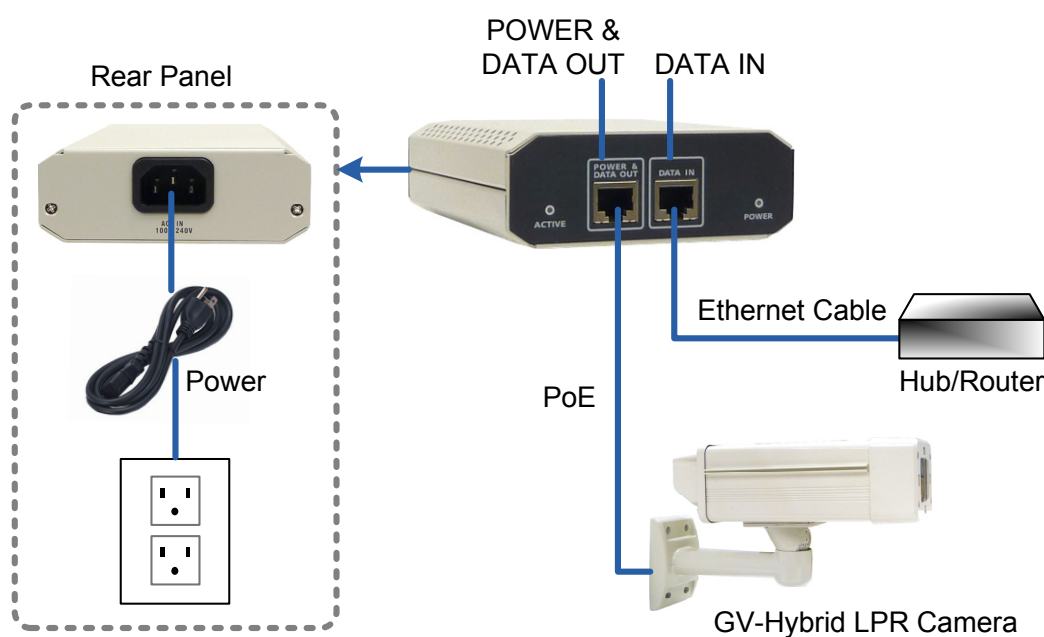


Figure 1-14

4. The status LED of the camera will be on.
5. You are ready to access the live view, adjust the image clarity and configure the basics. See *Getting Started*, Chapter 2.

Wire Definition

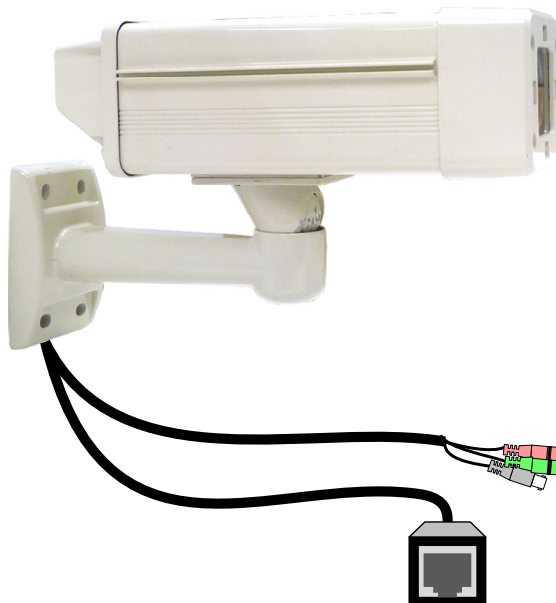


Figure 1-15

No.	Wire Color	Definition
1	Black (thick)	PoE
2	Black BNC	TV out
3	Green RCA	Audio Out
4	Pink RCA	Audio In

Chapter 2 Getting Started

2.1 Looking Up the IP Address

By default, your GV-Hybrid LPR Camera 10R is assigned with an unused IP address by the DHCP server when the camera is connected to the network. This IP address remains unchanged unless you unplug or disconnect your camera from the network.

Note: If your router does not support DHCP, the default IP address will be **192.168.0.10**. In this case, it is strongly suggested to modify the IP address to avoid IP address conflict with other GeoVision IP device on the same LAN. To change the IP address, see *Changing the IP Address* later in this section.

Follow the steps below to find out the IP address of your camera:

1. Install the GV-IP Device Utility program from the Software DVD.

Note: The PC installed with GV-IP Device Utility must be under the same LAN with the camera you wish to configure.

2. On the PC desktop, select **Start**, point to **Programs** and select **GV IP Device Utility** to execute the program. The GV IP Device Utility window appears and automatically searches for the GV IP devices on the same LAN.

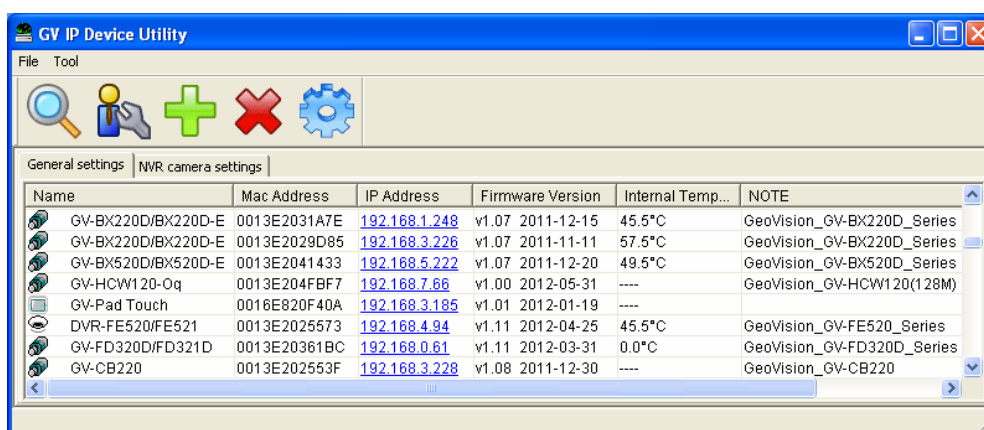


Figure 2-1

- Click the **Name** or **Mac Address** column to sort.

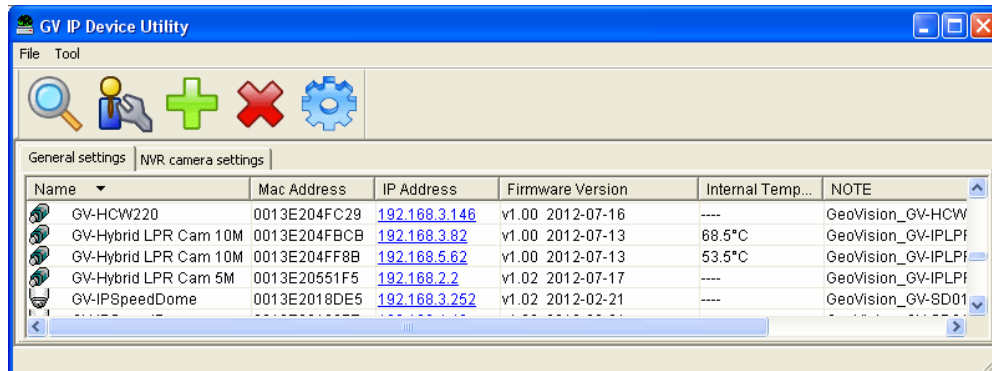


Figure 2-2

- Find the Mac Address of the camera to see its IP address.

Changing the IP Address

To modify the static IP address or set the camera to a public dynamic IP address, log in the Web interface to access the network setting page.

- Open your Web browser, and type in the IP address.
 - For static network connection, type the default IP address <http://192.168.0.10>
 - For DHCP connection, follow steps in *2.1 Looking Up the IP Address* to look up the current IP address.
- In both Login and Password fields, type the default value **admin**. Click **Apply**.
- In the left menu, select **Network** and then **LAN** to begin the network settings. This page appears.

LAN Configuration

In this section you can configure GV-IPCAM to work inside of LAN.

LAN Configuration

☐ Dynamic IP address Select this option to obtain IP address from a DHCP server Test DHCP

☒ Static IP address Select this option to enter a Static IP address manually

IP Address:

Subnet Mask:

Router/Gateway:

Primary DNS:

Secondary DNS: (Optional)

☐ PPPoE Select this option to establish a DSL connection

Username:

Password:

Figure 2-3

4. Select **Static IP address** or **PPPoE** and type the required network information.
5. Click **Apply**. The camera is now accessible by entering the assigned IP address on the Web browser.

Important:

1. If your camera uses a public dynamic IP address via PPPoE, use the dynamic DNS Service to obtain a domain name linked to the camera's changing IP address first. For details on Dynamic IP Address and PPPoE, see *4.7.2 Advanced TCP/IP* and *4.7.1 LAN Configuration*.
 2. If **PPPoE** is enabled and you cannot access the camera, you may have to reset it to the factory default and then perform the network settings again. To restore the factory settings, see *6.3 Restoring to Factory Default Settings*.
-

2.2 Accessing Your Surveillance Images

Follow these steps to access your surveillance images:

1. Open the Internet Explorer browser.
2. Enter the IP address or domain name of the GV-Hybrid LPR Camera 10R in the **Location/Address** field of your browser. To look up the IP address, see *2.1 Looking Up the IP Address*.

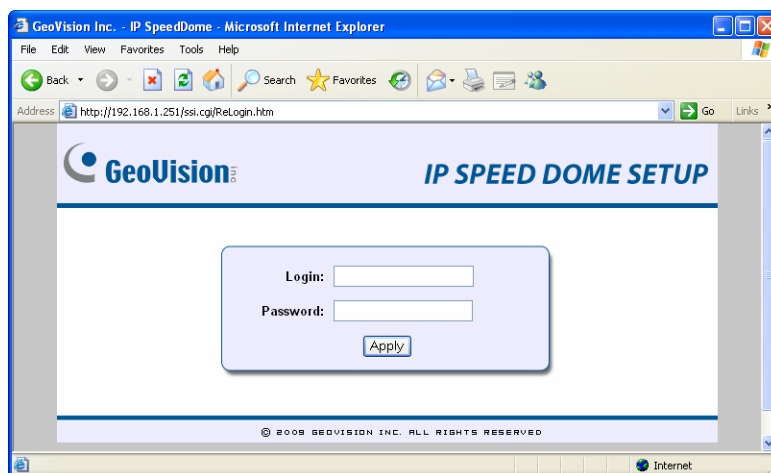


Figure 2-4

3. Enter the login name and password. The administrator account has unrestricted access to all the features and functions. The guest account is restricted to accessing live view and network status information.
 - The default login name and password for Administrator are **admin**.
 - The default login name and password for Guest are **guest**.
4. A video image, similar to the example in *Figure 3-1*, is now displayed on your browser.

Note: To enable the updating of images in Microsoft Internet Explorer, you must set your browser to allow ActiveX Controls and perform a once-only installation of GeoVision's ActiveX component onto your computer.

2.3 Configuring the Basics

Once you have installed and logged in the GV-Hybrid LPR Camera 10R, you are ready to configure some of its primary settings through the Web interface:

- Date and time adjustment: see *4.8.1 Date & Time Settings*.
- Login and privileged passwords: see *4.8.4 User Account*.
- Network gateway: see *4.7 Network*.
- Camera image adjustment: see *3.2 The Control Panel of the Live View Window*.
- Video format, resolution and frame rate: see *4.1.1 Video Settings*.

Chapter 3 Guest Mode and Live View Panel

This section introduces the features of the guest mode and the live view window.

Main Page of Guest Mode

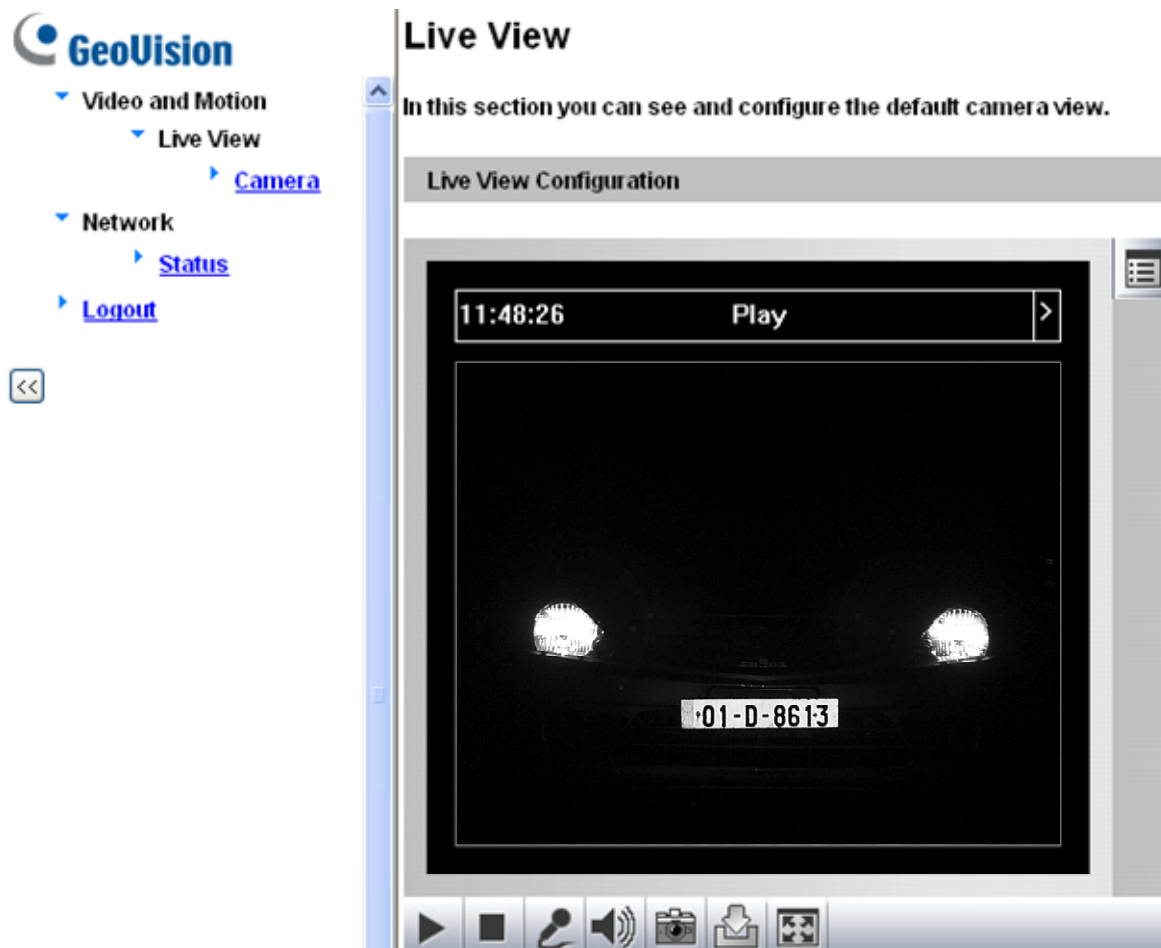


Figure 3-1

3.1 The Live View Window

In the left menu, click **Live View**, and then select **Camera** to see the live video.

Live View

In this section you can see and configure the default camera view.

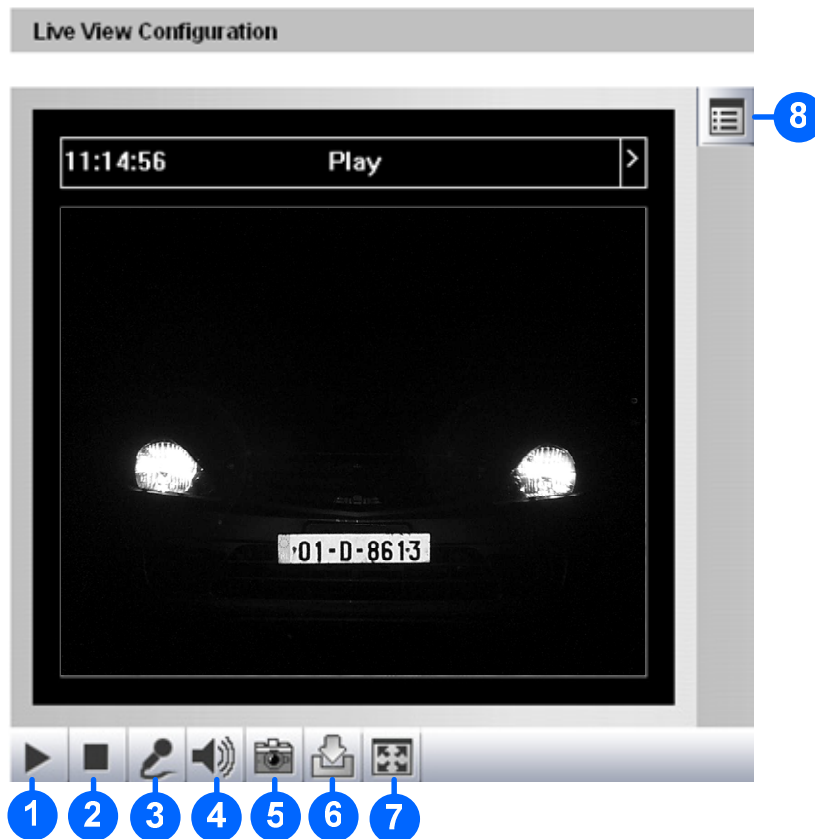


Figure 3-2

No.	Name	Function
1	Play	Plays live video.
2	Stop	Stops playing video.
3	Microphone	Talks to the surveillance area from the local computer.
4	Speaker	Listens to the audio around the camera.
5	Snapshot	Takes a snapshot of live video. --- See 3.3 <i>Snapshot of a Live Video</i> .
6	File Save	Records live video to the local computer. --- See 3.4 <i>Video Recording</i> .

No.	Name	Function
7	Full Screen	Switches to full screen view. Right-click the image to have these options: Snapshot, Full Screen, Resolution, PIP, PAP, GPS and Google Maps. --- See 3.5 <i>Picture-in-Picture and Picture-and-Picture View</i>.
8	Show System Menu	Brings up these functions: Alarm Notify, Video and Audio Configuration, Remote Config, Show Camera Name and Image Enhance. --- See 3.6 <i>Alarm Notification</i>, 3.7 <i>Video and Audio Configuration</i>, 3.8 <i>Remote Configuration</i>, 3.9 <i>Camera Name Display</i> and 3.10 <i>Image Enhancement</i> respectively.

3.2 The Control Panel of the Live View Window

To open the control panel of the Live View window, click the arrow button on top of the viewer. You can access the following functions by using the right and left arrow buttons on the control panel.

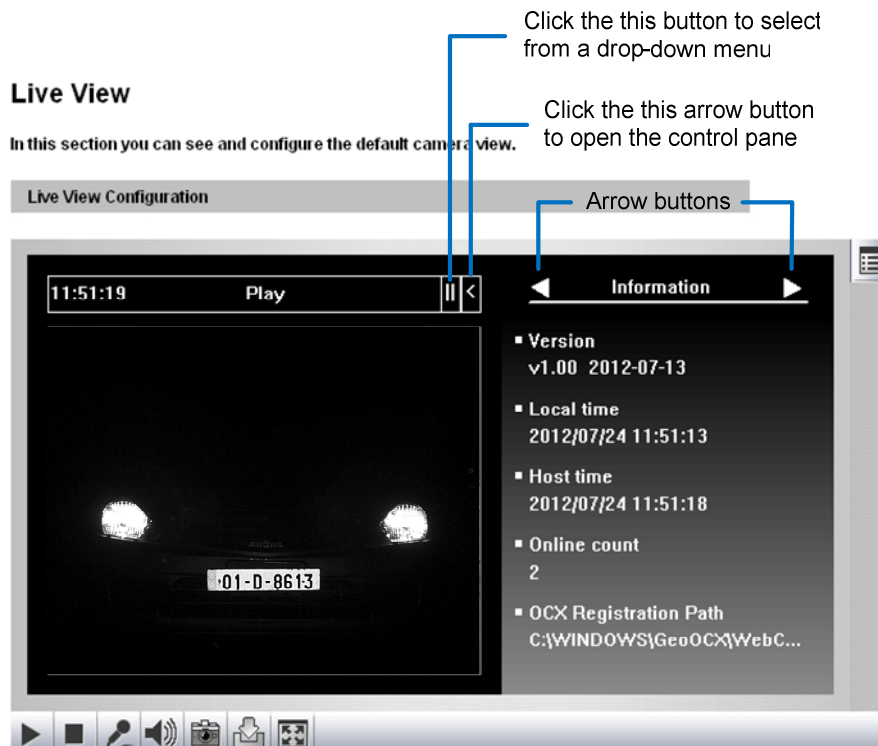


Figure 3-3

[Information] Displays the version of the GV-Hybrid LPR Camera 10R, local time of the local computer, time of the GV-Hybrid LPR Camera 10R, the number of users logging in to the GV-Hybrid LPR Camera 10R and the OCX registration path.

[Video] Displays the current video codec, resolution and data rate.

[Audio] Displays the audio data rates when the microphone and speaker devices are enabled.

[Alarm Notify] Displays the captured images by motion detection. For this function to work, you must configure the Alarm Notify settings first. See 3.6 *Alarm Notification*.

[Camera Adjustment] Adjusts the image quality settings. Click **Save** to store the changes to the settings.

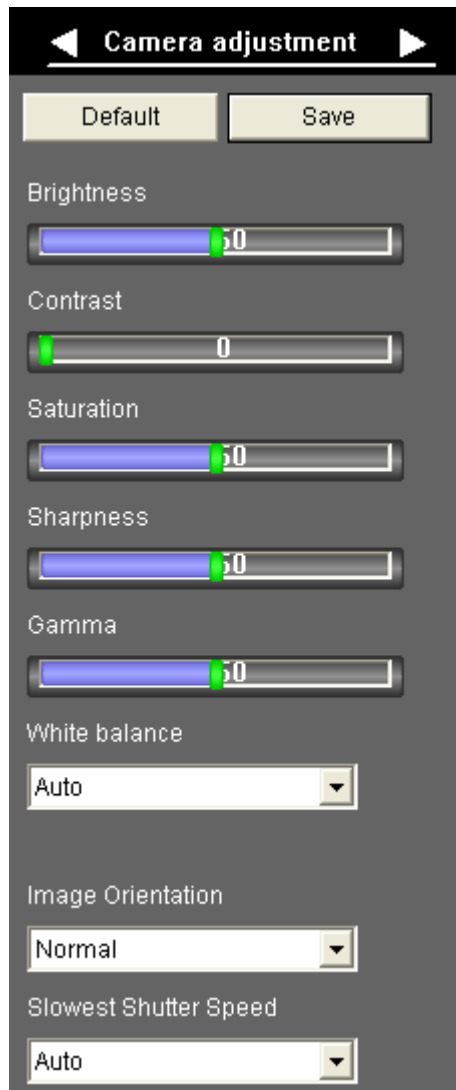


Figure 3-4

- **Brightness:** Adjusts the brightness of the image.
- **Contrast:** Adjusts the relative differences between one pixel and the next.
- **Saturation:** Adjusts the saturation of the image.
- **Sharpness:** Adjusts the sharpness of the image.
- **Gamma:** Adjusts the relative proportions of bright and dark areas.
- **White balance:** Automatically adjusts the image color to be closest to the image seen by the human eye. You can choose one of the four presets: **Auto**, **Outdoor**, **Tungsten Lamp** and **Fluorescent**. You can also choose **Manual** to adjust the white balance manually.
- **Image Orientation:** Changes the image orientation on the Live View window.

- **Slowest Shutter Speed:** Sets the shutter speed. Shutter speed controls the amount of the lights enters the image sensor and directly impacts the quality of image presentation. A slow shutter speed allows higher light exposure that creates a brighter overall image by blurring moving objects and bringing out background details, and a faster shutter speed lowers color and image clarity in order to capture motions. The minimum shutter speed ranges from 1/500 to 1/8000 sec. Select **Auto** for automatic shutter control or select a shutter speed value.

[GPS] Positions the GV-Hybrid LPR Camera 10R on Google maps. For details, see 4.5.2 *GPS Maps Settings*.

[Internal Temperature] Shows the current internal temperature of the camera and the normal temperature range.

[Download] Allows you to install programs from the hard drive.

3.3 Snapshot of a Live Video

To take a snapshot of live video, follow these steps:

1. Click the **Snapshot** button (No. 5, Figure 3-2). The Save As dialog box appears.
2. Specify **Save in**, type the **File name**, and select **JPEG** or **BMP** for **Save as Type**. You may also choose to display the camera name and/or the date, the text color and image quality for the snapshot.
3. Click the **Save** button to save the image in the local computer.

Note: You can also obtain a snapshot of the live view without logging in the user interface by executing the CGI command. See *Appendix A*.

3.4 Video Recording

You can record live video for a certain period of time to your local computer.

1. Click the **File Save** button (No. 6, Figure 3-2). The Save As dialog box appears.
2. Specify **Save in**, type the **File name**, and move the **Time Period** scroll bar to specify the time length of the video clip from 1 to 5 minutes.
3. Click the **Save** button to start recording.
4. To stop recording, click the **Stop** button (No. 2, Figure 3-2).

3.5 Picture-in-Picture and Picture-and-Picture View

The full screen mode provides two types of close-up views: **Picture-in-Picture (PIP)** and **Picture-and Picture (PAP)**. The two views are useful to provide clear and detailed images of the surveillance area.

Picture-in-Picture View

With the Picture-in-Picture (PIP) view, you can crop the video to get a close-up view or zoom in on the video.



Figure 3-4

1. Right-click the live view and select **PIP**. An inset window appears.
2. Click the insert window. A navigation box appears.
3. Move the navigation box around in the inset window to have a close-up view of the selected area.
4. To adjust the navigation box size, move the cursor to any of the box corners, and enlarge or diminish the box.
5. To exit the PIP view, right-click the image and click **PIP** again.

Picture-and-Picture View

With the Picture-and-Picture (PAP) view, you can create a split video effect with multiple close-up views on the image. A total of 7 close-up views can be defined.



Figure 3-5

1. Right-click the live view and select **PAP**. A row of three inset windows appears at the bottom.
2. Draw a navigation box on the image, and this selected area is immediately reflected in one inset window. Up to seven navigation boxes can be drawn on the image.
3. To adjust a navigation box size, move the cursor to any of the box corners, and enlarge or diminish the box.
4. To move a navigation box to another area on the image, drag it to that area.
5. To add, display/hide or to change the frame color of the navigation boxes, right-click the live view, select **Mega Pixel Setting** and click one of these options:
 - **Enable Add-Focus-Area Mode:** Allows the user to add navigation boxes to the image.
 - **Display Focus Area of PAP Mode:** Displays or hides the navigation boxes on the image
 - **Set Color of Focus Area:** Changes the color of the box frames.
6. To delete a navigation box, right-click the desired box, select **Focus Area of PAP Mode** and click **Delete**.
7. To exit the PAP view, right-click the image and click **PAP** again.

3.6 Alarm Notification

When a motion is detected, you can be alerted by a pop-up live video and view up to four captured images.



Figure 3-6

To configure this function, click the **Show System Menu** button (No. 8, Figure 3-2), and select **Alarm Notify**. This dialog box appears.

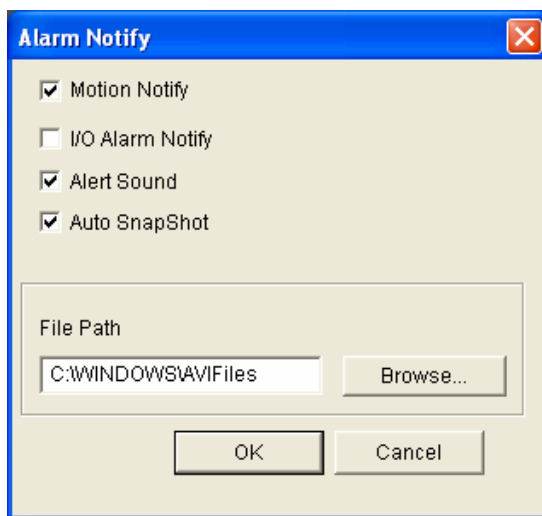


Figure 3-7

- **Motion Notify:** Once motion is detected, the captured images are displayed on the control panel of the Live View window.
- **I/O Alarm Notify:** This function is not available for GV-Hybrid LPR Camera 10R
- **Alert Sound:** Activates the computer alarm on motion.
- **Auto Snapshot:** The snapshot of live video is taken every 5 seconds on motion.
- **File Path:** Assigns a file path to save the snapshots.

3.7 Video and Audio Configuration

You can enable the microphone and speaker for two-way audio communication and adjust the set the number of frames to keep for live view buffer.

Click the **Show System Menu** button (No. 8, Figure 3-2), and select **Video and Audio Configuration**.

- **Camera:** Sets the number of frames to keep in live view buffer. Keeping more frames for live view buffer can ensure a smooth live view, but the live view will be delayed for the number of seconds specified.

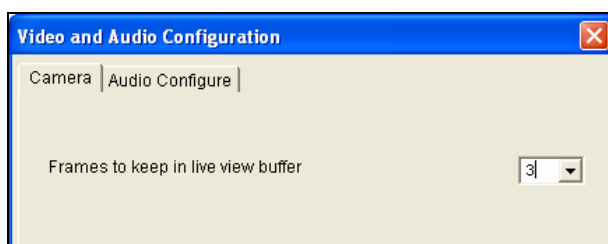


Figure 3-8

- **Audio Configure:** You can enable the microphone and speaker and adjust the audio volume.

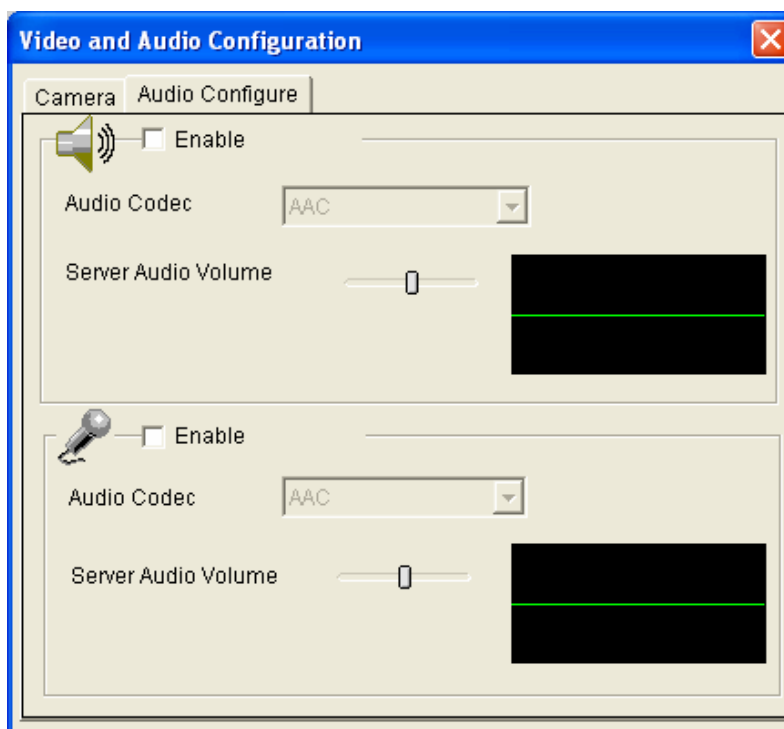


Figure 3-9

3.8 Remote Configuration

You can upgrade the device firmware over the network. Click the **Show System Menu** button (No. 8, Figure 3-2), and select **Remote Config**. The Remote Config dialog box will appear.

[Firmware Upgrade] In this tab, you can upgrade the firmware over the network. For details, see *Chapter 5 Advanced Applications*.

3.9 Camera Name Display

To display the camera name on the image, click the **Show System Menu** button (No. 8, Figure 3-2), and select **Show Camera Name**.

3.10 Image Enhancement

To enhance the image quality of live video, click the **Show System Menu** button (No. 8, Figure 3-2), and select **Image Enhance**. This dialog box appears.

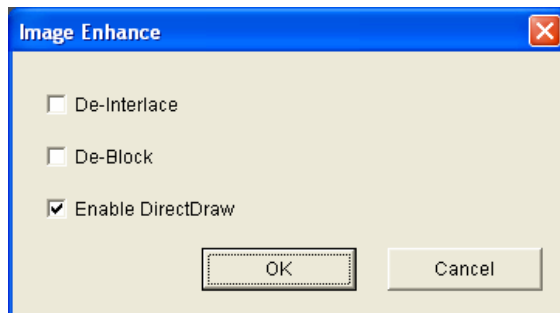


Figure 3-10

- **De-Interlace:** Converts the interlaced video into non-interlaced video.
- **De-Block:** Removes the block-like artifacts from low-quality and highly compressed video.
- **Enable DirectDraw:** Activates the DirectDraw function.

Chapter 4 Administrator Mode

The Administrator can access and configure the GV-Hybrid LPR Camera 10R over the network. The configuration categories include: **Video and Motion**, **Events and Alerts**, **Monitoring**, **Network**, and **Management**.



Figure 4-1

Corresponding Section for Configuration Menu

Find the topic of interest by referring to the indicated section.

4.1 Video and Motion	4.1.1 Video Settings 4.1.2 Motion Detection 4.1.3 Privacy Mask 4.1.4 Text Overlay 4.1.5 Tampering Alarm
4.2 Events and Alerts	4.2.1 Email 4.2.2 FTP 4.2.3 Center V2 4.3.4 VSM 4.3.5 GV-Video Gateway / GV-Recording Server 4.3.6 RTSP
4.3 Monitoring	
4.4 Network	4.4.1 LAN 4.4.2 Advanced TCP/IP 4.4.3 IP Filter 4.4.4 SNMP Settings
4.5 Management	4.5.1 Date and Time 4.5.2 GPS Maps Settings 4.5.3 User Account 4.5.4 Log Information 4.5.5 Tools 4.5.6 Language

4.1 Video & Motion

The GV-Hybrid LPR Camera 10R supports dual streams, Streaming 1 and Streaming 2, which allow separate codec and resolutions settings for a single video transmission. In a bandwidth-limited network, such as mobile phone surveillance, this dual-stream feature allows you to view live video in lower resolution and codec (Streaming 2), and record in highest resolution 1280 x 1024 and codec MJPEG (Streaming 1) at the same time.

Comparison between Stream 1 and Stream 2:

Video Setting Options	Stream 1	Stream 2
Video Signal Type	Different codec, resolutions and frame rates can be applied to Stream 1 and 2.	
Watermark Setting	Yes	Not configurable. Settings in Stream 1 will be automatically applied to Stream 2.
Audio Codec		
TV Out Setting		
Status LED Control		

4.1.1 Video Settings

Video Settings

In this section you can define compression art, broadcasting method and privacy mask.

Camera

Name

Connection template

Video Signal Type

In this section you can configure camera's video signal, also the resolution and frame per second to be transmitted through the network

Video Format

Resolution	Frame per second
448*252 (16:9)	30

Bandwidth Management

In this section you can configure the bit rate used by video stream. When VBR (Variable Bit Rate) is selected, consistent image quality is achieved at the cost of varying bit rate. To set a consistent bit rate at the cost of varying image quality, select CBR (Constant Bit Rate).

☒ VBR	Quality Good	Maximal Bit Rate Auto	Mbit
☐ CBR	Maximal Bit Rate 1024 Kbps		

GOP Structure and Length

In this section you can configure the composition of the video stream (GOP structure). Using I-Frame only will significantly increase the video quality as well as the bandwidth.

Group of Picture(GOP) Size (seconds)

Text Overlay Settings

In this section you can set up Text Overlay

☐ Overlaid with camera name
☐ Overlaid with date stamps
☐ Overlaid with time stamps

Watermark Setting

In this section you can set Watermark function.

☐ Enable

Audio Settings

Audio Codec

TV-Out

Signal Format ☐ NTSC ☐ PAL ☒ Disable

LED Control

Ready LED ☒ Enable ☐ Disable

Figure 4-2

[Name]

Rename the camera. The camera name will appear on the Live View. To display the camera name, see *3.9 Camera Name Display*.

[Connection Template]

Select the type of your network connection. Unless you select **Customized**, this option will automatically bring up the recommended video resolution, frame rate, bandwidth and GOP size.

[Video Signal Type]

Select the codec type, resolution and frame rate. The default codec is **MJPEG**. Choose H.264 or MJPEG for the main stream/sub stream. The supported resolutions are listed blow:

Video Resolution		
Main Stream	4:3	1280 x 960, 640 x 480, 320 x 240
	16.9	1280 x 720, 640 x 360, 448 x 252
	5:4	1280 x 1024, 640 x 512, 320 x 256
Sub Stream	4:3	640 x 480, 320 x 240
	16.9	640 x 360, 448 x 252
	5:4	640 x 512, 320 x 256

[Bandwidth Management]

When using the H.264 codec, it is possible to configure the bitrate settings to control bandwidth usage.

- **VBR (Variable Bitrate):** The quality of the video stream is kept as constant as possible at the cost of a varying bitrate. The bandwidth is much more efficiently used than a comparable CBR. Set the image quality to one of the 5 standards: **Standard, Fair, Good, Great** and **Excellent**.
- **Maximal Bit Rate:** When the system bitrate exceeds the specified Maximal Bit Rate, the system will automatically lower its bitrate so as not to exceed it. Select one of the bitrates from the drop-down list or select **Auto** if you do not want to enable this function.
- **CBR (Constant Bitrate):** CBR is used to achieve a specific bitrate by varying the quality of the stream. The bitrates available for selection depend on the image resolution.

[GOP Structure and Length]

Set the maximum number of seconds between every key frame.

[Text Overlay Settings]

- **Overlaid with camera name:** Includes camera names on live and recorded videos.
- **Overlaid with date stamps:** Includes date stamps on live and recorded videos.
- **Overlaid with time stamps:** Includes time stamps on live and recorded videos.

[Watermark Setting]

Enable this option to watermark all recordings. The watermark allows you to verify whether the video has been tampered while it was recorded. See *6.4 Verifying Watermark*.

[Audio Codec] Use the drop-down list to select between **G.711** and **AAC** options.

[TV Out] Select the signal format for the video output of the camera as either **NTSC** or **PAL**. This function is disabled by default.

Note: For smooth live view display on TV monitor, the video resolution must be of 1280 x 1024 or lower. If dual streams are enabled, the sub stream must be set at 640 x 480.

[LED Control]

- **Ready LED:** Select **Disable** if you do not wish to use the Status LED.

4.1.2 Motion Detection

Motion detection is used to generate an alarm whenever movement occurs within the scene. You can configure up to 8 detection zones with different sensitivity values. Create at least one detection zone to enable this function.

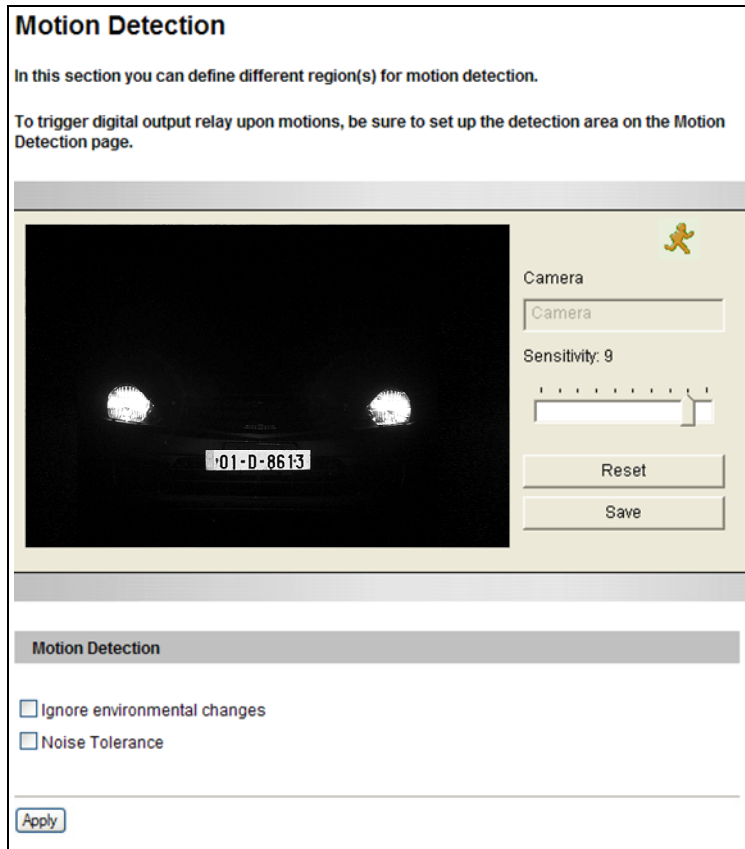


Figure 4-3

1. Select a sensitivity value using the slider bar. There are 10 sensitivity levels. The higher the value, the more sensitive the camera is to motion. The default sensitivity value is **9**.
2. Define a detection zone by dragging an area on the image. Click **Add** when you are prompted to confirm the setting.
3. To create several areas with different sensitivity values, repeat Steps 1 and 2.
4. Click **Save** to save the above settings.
5. Click **Reset** to clear all the selected areas.
6. For the camera to ignore environmental changes such as rain or snow, select the **Ignore environmental changes**.
7. To reduce video noise when the lighting condition changes, select **Noise Tolerance**.
8. Click the **Apply** button.

4.1.3 Privacy Mask

The Privacy Mask can block out sensitive areas from view, covering the areas with dark boxes in both live view and recorded clips. This feature is ideal for privacy protection on locations with private information, keyboard sequences (e.g. passwords), and any place you would like to keep inaccessible to view.

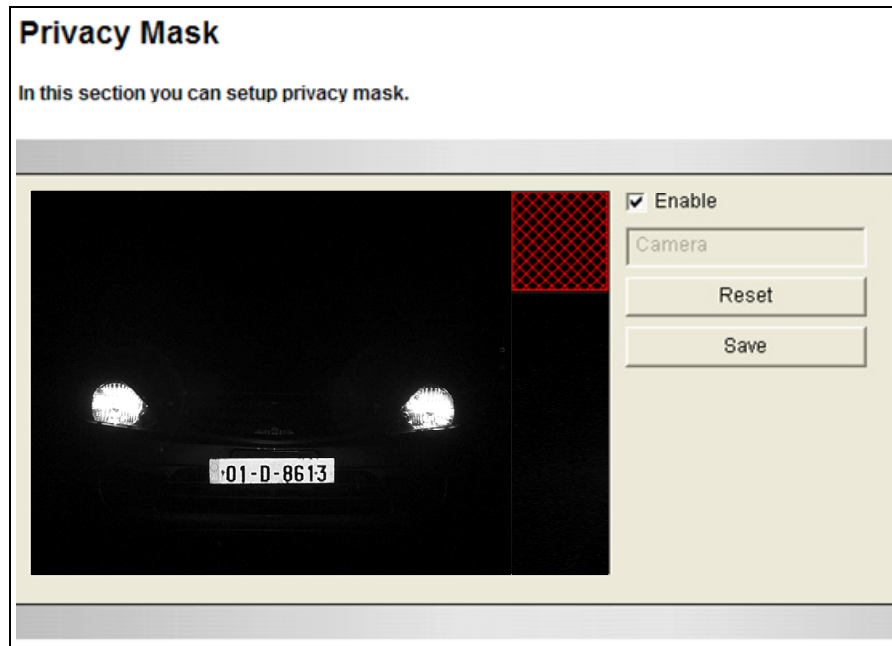


Figure 4-4

1. Select the **Enable** option.
2. Drag the area(s) where you want to block out on the image. Click **Add** when you are prompted to confirm the setting.
3. Click the **Save** button to save all the settings.

4.1.4 Text Overlay

The Text Overlay allows you to overlay any text in any place on the camera view. Up to 16 text messages can be created on one camera view. The overlaid text will be saved in the recordings.

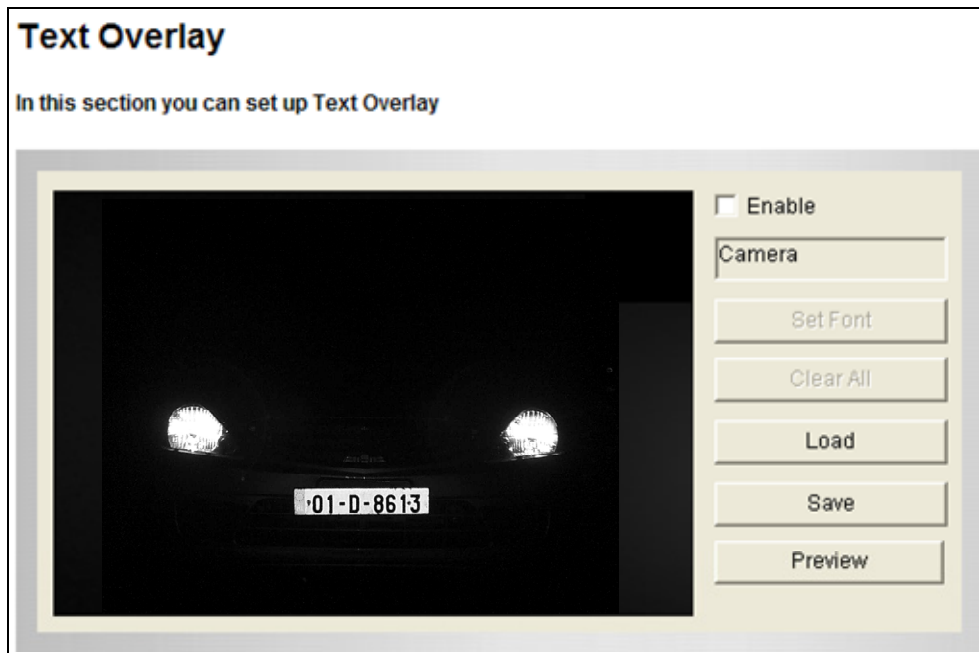


Figure 4-5

1. Select the **Enable** option.
2. Click **Set Font** to set up the font, font style and font size in a pop-up window.
3. Click any place on the image. This dialog box appears.

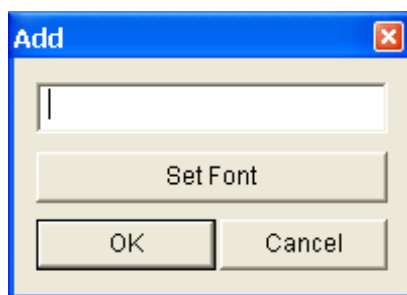


Figure 4-5

4. Type the desired text, and click **OK**. The text is overlaid on the image.
5. Drag the overlaid text to a desired place on the image.
6. Click **Set Font** to modify the font settings.
7. Click **Save** to apply the settings, or click **Load** (Undo) to revert to the last saved setting.
8. Click **Preview** to see how the text will appear on the image. Click **Close** to end the preview.

4.1.5 Tampering Alarm

The Tampering Alarm is used to detect whether a camera is being physically tampered. An e-mail alarm can be sent when the camera is moved, covered up, or out of focus. Make sure the e-mail settings are set up. For detail, see *4.2.1 E-Mail*.

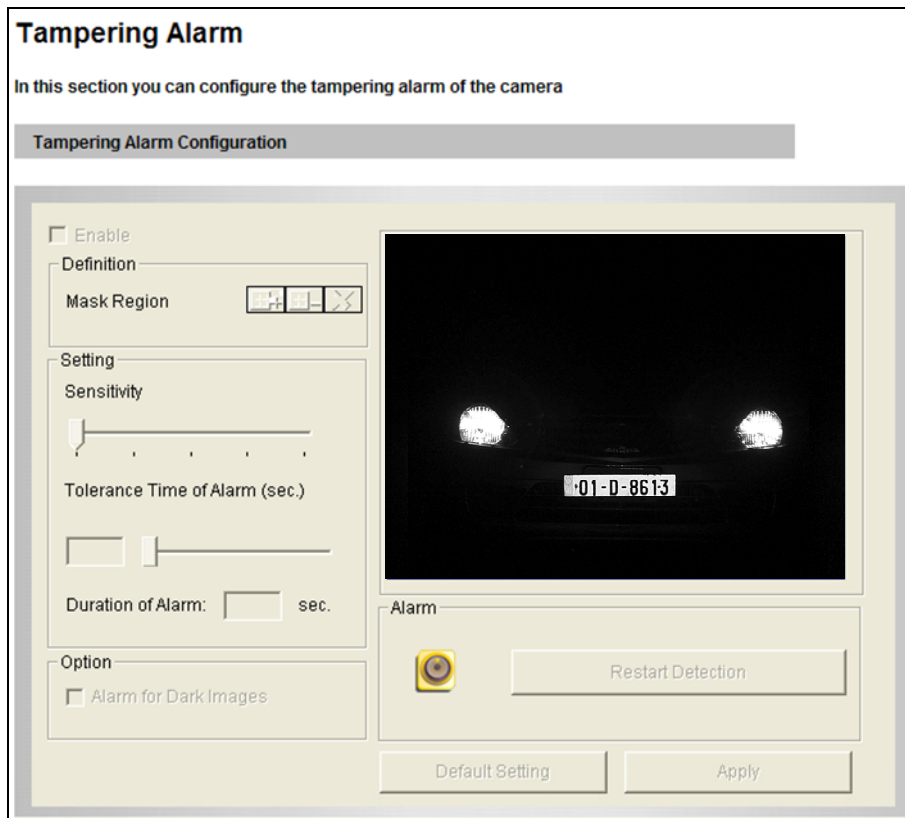


Figure 4-6

To configure the tampering alarm:

1. Select the **Enable** option.
2. If you want the camera to ignore any movement or scene change in certain areas, click the  button to drag areas on the camera view.
3. Select the desired detection sensitivity by moving the slider. The higher the value, the more sensitive the camera is to scene changes.
4. In the **Tolerance Time of Alarm** field, specify the time length allowed for scene changes before an e-mail notification is sent.
5. To trigger an alarm when the scene turns dark, e.g. the lens of camera has been covered, select **Alarm for Dark Images**.
6. Click **Apply** to save all the settings.

4.2 Events & Alerts

For motion and tampering events, the Administrator can set up two types of alert:

1. Send a captured image by e-mail or FTP. See *4.2.1 E-Mail* and *4.2.2 FTP*.
2. Notify Center Monitoring Stations such as Center V2, VSM, by video or text alerts.

To enable above alerts, you must also set the following features:

- Motion Detection (See *3.1.2 Motion Detection*)
- For e-mail and FTP alerts, it is required to start monitoring (See *4.3 Monitoring*).

4.2.1 E-mail

When a motion is detected, the GV-Hybrid LPR Camera 10R can send an e-mail alert, containing a captured image to a remote user.

Important: To send e-mail alert upon motion / tampering events, make sure you also enable the Motion Detection / Tampering Alarm function. For setup details, see [3.1.2 Motion Detection](#) and [3.1.5 Tampering Alarm](#).

Email

In this section you can configure mailserver (SMTP) to handle events, videos, and error messages.

To notify the E-mail Server upon motions, be sure to set up the detection area on the [Motion Detection](#) page.

Primary mail server

☐ Enable

Server URL/IP Address

Server Port

From email address

Send to (Please use "," to separate recipients' addresses)

Alerts Interval time in minute (0 to 60)

☐ Need authentication to login

User Name

Password

☐ This server requires a secure connection (SSL)

Email - Alarm Settings

☐ Tampering Alarm

☐ Motion Detection

Figure 4-8

To enable the e-mail functions:

1. Select **Enable** to set up e-mail notifications.
2. **Server URL/IP Address:** Type the SMTP Server's URL address or IP address.
3. **Server Port:** Type the SMTP Server's port number or keep the default value **25**.
4. **From email address:** Type the sender's e-mail address.
5. **Send to:** Type the e-mail address(s) you want to send alerts to.
6. **Alerts interval time in minute:** Specify the interval between e-mail alerts. The valid interval is from 0 to 60 minutes. This option is useful for frequent event occurrence. Any event detected during the interval period will be ignored.

7. If the SMTP Server needs authentication, select **Need authentication to login** and type a valid **Username** and **Password** to log in the SMTP server. If the SMTP Server needs a secure connection (SSL), select **This server requires a secure connection**.
8. **Email-Alarm Settings:** Select the event to automatically send an e-mail alert.
9. Click **Apply**.
10. In the left menu, select **Monitoring** and click the **Start** button to start monitoring.

4.2.2 FTP

You can also send the captured image to a remote FTP server for alerts.

Important: To send FTP alert upon motions, be sure to set up the detection area on the Motion Detection page. For details, see [4.1.2 Motion Detection](#).

FTP Client and Server Setting

In this section you can configure a ftp server (File Transfer Protocol) to handle events, videos, and error messages.

To notify the FTP Server upon motions, be sure to set up the detection area on the Motion Detection page.

Upload to a FTP server

☐ Enable

Server URL/IP Address

Server Port

User Name

Password

Remote Directory

Alerts Interval time in minute (0 to 60)

FTP - Alarm Settings

☐ Motion Detection

☐ Continuously send images upon trigger events(Motion)

Figure 4-9

[To Enable the FTP functions]

1. Select **Enable** to set up the FTP function.
2. **Server URL/IP Address:** Type the URL address or IP address of the FTP Server.
3. **Server Port:** Type the port number of the FTP Server or keep the default value **21**.
4. Type the **Username** and **Password** of the FTP Server.
5. **Remote Directory:** Type the name of the storage folder on the FTP Server.
6. **Alerts interval time in minute:** Specify the interval between FTP alerts. The interval can be between 0 and 60 minutes. The option is useful for frequent event occurrence. Any event triggers during the interval period will be ignored.
7. **FTP-Alarm Settings:** Select to automatically send a snapshot to the FTP Server upon motion detection. Select **Continuously send images upon trigger events (Motion)** to upload a series of snapshots to the FTP Server upon motion detection.
8. In the left menu, select **Monitoring** and click the **Start** button to start monitoring.

4.2.3 Center V2

The central monitoring station Center V2 can be notified of a motion event by live videos and text alerts. Up to **two** Center V2 servers can be connected. For live monitoring through Center V2, you must already have a subscriber account on each of the Center V2 server.

Important: To notify the Center V2 Server upon motion events, be sure to set up the detection area on the Motion Detection page. For details, see [4.1.2 Motion Detection](#) and [8.1 Center V2](#).

Connection1

Connection2

Center V2

In this section you can configure the connection to Center V2 and tasks to perform.

To notify the Center V2 Server upon motions, be sure to set up the detection area on the Motion Detection page.

Center V2 server

Activate Link

☒

Host name or IP Address:

192.168.0.214

Port number:

5551

User Name:

Office 9F

Password:

•••••

Cease motion detection messages from

☒ Camera

Enable schedule mode

☒

Apply

Select schedule time

☒ Span 1

00:00 ~ 00:00

Next Day

☐ Span 2

00:00 ~ 00:00

Next Day

☐ Span 3

00:00 ~ 00:00

Next Day

☐ Weekend
 ☒ Saturday and Sunday
 ☐ Only Sunday

Apply

Connection Status

Status: Connected. Connected Time: Mon Aug 27 13:55:53 2012

Figure 4-10

To enable the Center V2 connection:

1. **Activate Link:** Enable the monitoring through Center V2.
2. **Host Name or IP Address:** Type the host name or IP address of Center V2.
3. **Port Number:** Match the port to **Port 2** on Center V2. Or keep the default value **5551**. For details, see *8.1 Center V2*.
4. **User Name:** Type a valid user name to log in to Center V2.
5. **Password:** Type a valid password to log in to Center V2.
6. Click **Apply**. The Connection Status should display “Connected” and connected time.
7. To establish connection to the second Center V2, click the **Connection 2** tab and repeat the above steps for setup.

You can also find on this Center V2 settings page:

- **Cease motion detection messages from:** Stops notifying Center V2 of motion detection.
- **Enable schedule mode:** Starts the monitoring through Center V2 based on the schedule you set in the **Select Schedule Time** section.

[Select schedule time]

- **Span 1- Span 3:** Enable recording (upon motion events) at up to 3 different time frames for a day, represented by Span 1 to Span 3.
- **Weekend:** Enable recording (upon motion events) for both Saturday and Sunday or for Sunday only.

4.2.4 VSM

The central monitoring station VSM can be notified of a motion event by text alerts. Up to **two** VSM servers can be connected. For live monitoring through VSM, you must already have a subscriber account on each of the VSM server.

Important: To notify the VSM upon motions, be sure to set up the detection area on the Motion Detection page. For details, see [4.1.2 Motion Detection](#) and [8.2 VSM](#).

[Connection1](#) | [Connection2](#)

Vital Sign Monitor Server Setting

In this section you can configure the connection to VSM Server and tasks to perform.

To notify the VSM upon motions, be sure to set up the detection area on the Motion Detection page.

Vital Sign Monitor Server

Activate Link

☐

Host name or IP Address:

Port number:

User Name:

Password:

Cease motion detection messages from

☐ Camera

Enable schedule mode

☐

Apply

Select schedule time

☐ Span 1

:

~

:

Next Day

☐ Span 2

:

~

:

Next Day

☐ Span 3

:

~

:

Next Day

☐ Weekend

☒ Saturday and Sunday

☐ Only Sunday

Apply

Connection Status

Status: Disconnected

Figure 4-11

To enable the VSM connection:

1. **Activate Link:** Enable the monitoring through VSM.
2. **Host Name or IP Address:** Type the host name or IP address of VSM.
3. **Port Number:** Match the port to **Port 2** on VSM or keep the default value **5609**. For details, see *8.2 VSM*.
4. **User Name:** Type a valid user name to log into VSM.
5. **Password:** Type a valid password to log into VSM.
6. Click **Apply**. The Connection Status should display “Connected” and connected time.
7. To establish connection to the second VSM, click the **Connection 2** tab and repeat the above steps for setup.

These options you can also find on this VSM setting page:

- **Cease motion detection messages from:** Stops notifying VSM of motion detection.
- **Enable schedule mode:** Starts the monitoring through VSM based on the schedule you set in the **Select Schedule Time** section. For schedule setup, refer to *4.2.3 Center V2*.

4.2.5 GV-Video Gateway / GV-Recording Server

The GV-Video Gateway and GV-Recording Server are video streaming servers designed for large-scale video surveillance deployments. The GV-Video Gateway / GV-Recording Server (with recording capability) can receive up to 128 channels from various IP video devices, and distribute up to 300 channels to its clients. With the GV-Video Gateway / GV-Recording Server, the desired frame rate can be ensured while the CPU loading and bandwidth usage of the IP video devices are significantly reduced.

The GV-Hybrid LPR Camera 10R can be connected with up to two GV-Video Gateway / GV-Recording Server. To send the video images to the GV-Video Gateway or GV-Recording Server, you must already have an account on each of the GV-Video Gateway / GV-Recording Server with the user name and password specified below.

Connection 1

Connection 2

Video Gateway / Recording Server

In this section you can configure the connection to Video Gateway / Recording Server.

To notify the Video Gateway/Recording Server upon motions, be sure to set up the detection area on the Motion Detection page.

Video Gateway / Recording Server

Activate Link

☐

Host name or IP Address:

Port number:

50000

User Name:

Password:

Cease motion detection messages from

☐ Select all
 ☐ Streaming 1
 ☐ Streaming 2

Enable schedule mode

☐

Apply

Select schedule time

☐ Span 1

00

:

00

~

00

:

00

Next Day

☐ Span 2

00

:

00

~

00

:

00

Next Day

☐ Span 3

00

:

00

~

00

:

00

Next Day

☐ Weekend

☒ Saturday and Sunday

☐ Only Sunday

Apply

Connection Status

Status: Disconnected

Figure 4-13

To enable connection to GV-Video Gateway / GV-Recording Server:

1. **Activate Link:** Enable the monitoring through GV-Video Gateway / GV-Recording Server.
2. **Host Name or IP Address:** Type the host name or IP address of the GV-Video Gateway / GV-Recording Server.
3. **Port Number:** Match the communication port specified on GV-Video Gateway / GV-Recording Server. Or keep the default value **50000**.
4. **User Name:** Type a valid user name to log into GV-Video Gateway / GV-Recording Server.
5. **Password:** Type a valid password to log into GV-Video Gateway / GV-Recording Server.
6. Click **Apply**. The Connection Status should display “Connected” and connected time.
7. To establish connection to the second GV-Video Gateway / GV-Recording Server, click the **Connection 2** tab and repeat the above steps for setup.

You can also find these options:

- **Enable schedule mode:** Starts the monitoring through GV-Video Gateway / GV-Recording Server based on the schedule you set in the **Select Schedule Time** section. For schedule setup, refer to *4.2.3 Center V2*.
- **Cease motion detection messages from:** Stops notifying GV-Video Gateway / GV-Recording Server of motion events.

4.2.6 RTSP / 3GPP

The RTSP / 3GPP Server enables video and audio streaming to your 3G-enabled mobile phone.

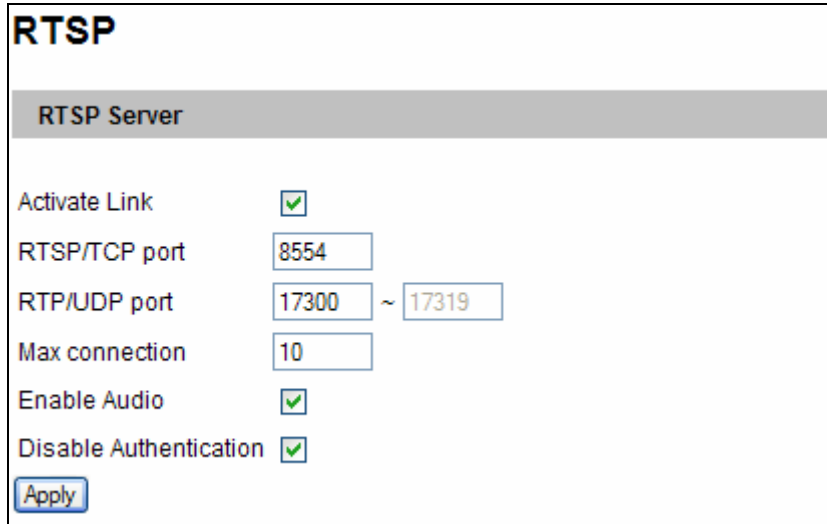


Figure 4-15


- **Activate Link:** Enable the RTSP / 3GPP service.
- **RTSP/TCP Port:** Keep the default value **8554**, or modify it if necessary.
- **RTP/UDP Port:** Keep the default range from **17300** to **17319**, or modify it if necessary. The number of ports for use is limited to 20.
- **Max Connection:** Set the maximum number of RTSP and 3GPP connections to the GV-Hybrid LPR Camera 10R. The maximum value is **10**.
- **Enable Audio:** This option is enabled by default. Select to enable audio streaming through RTSP.
- **Disable Authentication:** Authentication is disabled by default, with which the ID and password of the GV-Hybrid LPR Camera 10R are not required when accessing live view through the RTSP command.

For details on remote monitoring with mobile phones, see *Smart Device Connection*, Chapter 8. For RTSP command, see *Appendix B RTSP Protocol Support*.

4.3 Monitoring

You can start monitoring and send e-mail and/or FTP alert upon motion events. Select **Activate email and FTP alert** and click the **Start** button.

Important: Make sure you have set up the e-mail and FTP server settings. For detail, see [4.2.1 E-Mail](#) and [4.2.2 FTP](#).

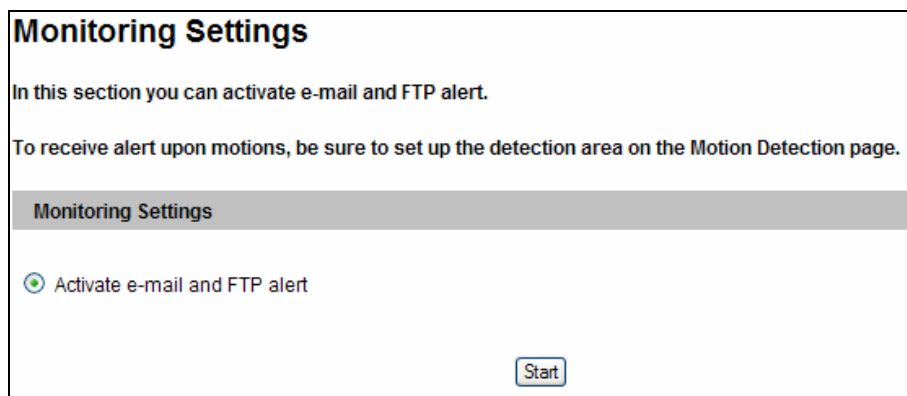

The image shows a web interface titled "Monitoring Settings". Below the title, there is a paragraph: "In this section you can activate e-mail and FTP alert." followed by another paragraph: "To receive alert upon motions, be sure to set up the detection area on the Motion Detection page." Below these paragraphs is a horizontal bar with the text "Monitoring Settings". Underneath the bar, there is a radio button with a green dot, followed by the text "Activate e-mail and FTP alert". At the bottom right of the interface is a button labeled "Start".

Figure 4-16

4.4 Network

The Network section includes some basic but important network configurations that enable the GV-Hybrid LPR Camera 10R to be connected to a TCP/IP network.

4.4.1 LAN Configuration

According to your network environment, select among Static IP, DHCP and PPPoE.

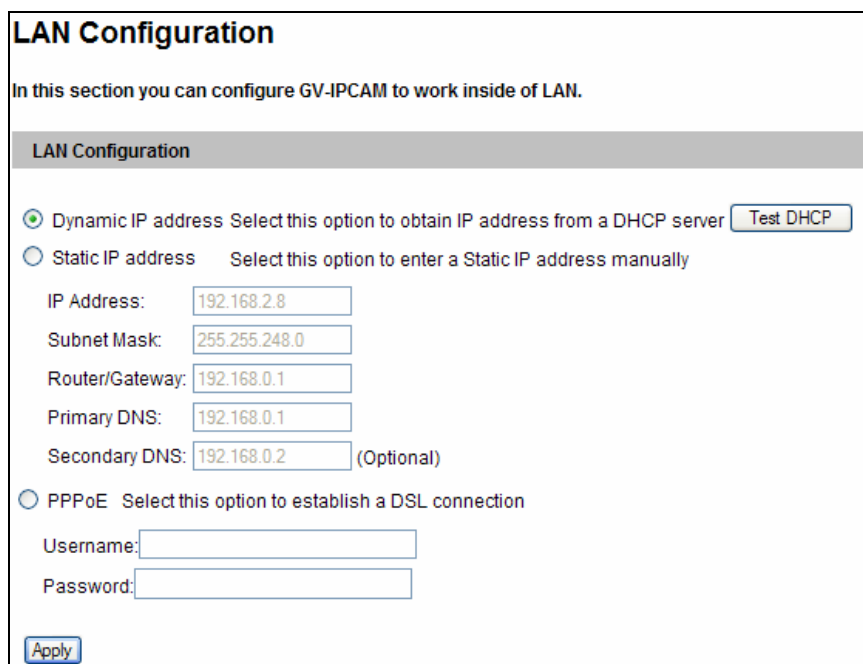


Figure 4-19

[LAN Configuration]

- **Dynamic IP address:** The network environment has a DHCP server which will automatically assign a dynamic IP address to the camera. Click the **Test DHCP** to see the currently assigned IP address or look up the address using GV-IP Device Utility.
- **Static IP address:** Assign a static IP or fixed IP to the camera. Type the camera's IP address, Subnet Mask, Router/Gateway, Primary DNS server and Secondary DNS server.

Parameters	Default
IP address	192.168.0.10
Subnet Mask	255.255.255.0
Router/Gateway	192.168.0.1
Primary DNS server	192.168.0.1
Secondary DNS server	192.168.0.2

- **PPPoE:** The network environment is xDSL connection. Type the Username and Password provided by ISP to establish the connection. If you use the xDSL connection with dynamic IP addresses, first use the DDNS function to obtain a domain name linking to the camera's changing IP address.

For details on Dynamic DNS Server Settings, see *4.7.2 Advanced TCP/IP*.

4.4.2 Advanced TCP/IP

This section introduces the advanced TCP/IP settings, including DDNS Server, HTTP port, streaming port and UPnP.

Advanced TCP/IP

In this section you can set the advanced TCP/IP configuration

Dynamic DNS Server Settings

In this section you can configure your GV-IPCAM to obtain a domain name by using a dynamic IP.

☐ Enable

Service Provider: Geovision DDNS Server ex: [Register Geovision DDNS Server](#)

Host Name:

User Name:

Password:

Update Time : [Refresh](#)

[Apply](#)

HTTP Port Settings

In this section you can change the default HTTP port number (80) to any port within the range 1024-65535. It is a simple method to increase system security using port mapping. You can configure HTTP connection to an alternative port.

HTTP Port:

[Apply](#)

HTTPS Settings

In this section you can change the default HTTPS port number (443) to any port within the range 1024-65535. It is a simple method to increase system security using port mapping. You can configure HTTPS connection to an alternative port.

☐ Enable

HTTP Port:

[Apply](#)

GV-IPCAM Streaming Port Settings

In this section you can configure Streaming connection from a determine port. The default setting is 10000.

VSS Port:

[Apply](#)

UPnP Settings

In this section you can enable or disable UPnP function.

UPnP: ☒ Enable ☐ Disable

[Apply](#)

QoS Settings

QoS DSCP Settings. The DSCP value can be in decimal or hexadecimal format between 0-63

DSCP Value:

[Apply](#)

Network Connection Check Settings

Enable or disable the network connection check. If network connection fails, the camera will reboot automatically in response.

☒ Enable

[Apply](#)

Figure 4-20

[Dynamic DNS Server Settings]

DDNS (Dynamic Domain Name System) provides a convenient way of accessing the GV-Hybrid LPR Camera 10R when using a dynamic IP. DDNS assigns a domain name to the GV-Hybrid LPR Camera 10R, so that the Administrator does not need to go through the trouble of checking if the IP address assigned by DHCP Server or ISP (in xDSL connection) has changed.

Before enabling the DDNS function, the Administrator should apply for a Host Name from the DDNS service provider's website. There are 2 providers listed in the GV-Hybrid LPR Camera 10R: GeoVision DDNS Server and DynDNS.org.

To enable the DDNS function:

1. **Enable:** Enable the DDNS function.
2. **Service Provider:** Select the DDNS service provider you have registered with.
3. **Host Name:** Type the host name used to link to the GV-Hybrid LPR Camera 10R. For the users of GeoVision DDNS Server, it is unnecessary to fill the field because the system will detect the host name automatically.
4. **User Name:** Type the user name used to enable the service from the DDNS.
5. **Password:** Type the password used to enable the service from the DDNS.
6. Click **Apply**.

[HTTP Port Settings]

The HTTP port enables connecting the GV-Hybrid LPR Camera 10R to the Web. For security integration, the Administrator can hide the server from the general HTTP port by changing the default HTTP port **80** to a different port one within the range of **1024** through to **65535**.

[HTTPS Settings]

By enabling the Hypertext Transfer Protocol Secure (HTTPS) settings, you can access the camera through a secure protocol.

[Camera Streaming Port Settings]

The VSS port enables connecting the GV-Hybrid LPR Camera 10R to the GV-System. The default setting is **10000**.

[UPnP Settings]

UPnP (Universal Plug & Play) is a networking architecture that provides compatibility among networking equipment, software and peripherals of the 400+ vendors that are part of the Universal Plug and Play Forum. It means that they are listed in the network devices table for the operating system (such as Windows XP) supported by this function. Enabling this function, you can connect to the GV-Hybrid LPR Camera 10R directly by clicking on the GV-Hybrid LPR Camera 10R listed in the network devices table. This function is enabled by default.

[QoS Settings]

The Quality of Service (QoS) is a bandwidth control mechanism that guarantees delay-sensitive data flows such as voice and video streams, obtain a certain amount of bandwidth to keep the streaming smooth.

To apply QoS to GV-Hybrid LPR Camera 10R, all network routers must support QoS and QoS must be enabled on these devices. To enable the QoS on GV-Hybrid LPR Camera 10R, enter a Differentiated Services Code Point (DSCP) value. This value is a field in an IP packet that enables different levels of services for the network traffic. When the video stream from GV-Hybrid LPR Camera 10R reaches a router, the DSCP value will tell the router what service level should be applied, e.g. the bandwidth amount. This value ranges from 0 to 63 in decimal format. The default value is 0 which means QoS is disabled. Click **Apply** to finish.

[Network Connection Check Settings]

When the network connection check is enabled, the GV-Hybrid LPR Camera 10R will check for Internet connection and reboots automatically when it is disconnected from the Internet. This function is enabled by default.

4.4.3 IP Filtering

The Administrator can set IP filtering to restrict access to the GV-Hybrid LPR Camera 10R.

IP Filter Setting

In this section you can allow or deny network connection listed in the table. (Only 4 filter entries are supported.)

IP Filtering

☐ Enable IP Filtering

No.	IP Address Range in CIDR format	Action	Customize
The IP Filter has not been configured yet			

Filtered IP: ex: 192.168.1.2 or 192.168.1.0/24

Action to take: Allow ▾

Apply


Figure 4-21

To enable the IP Filter function:

1. **Enable IP Filtering:** Enable the IP Filtering function.
2. **Filtered IP:** Type the IP address from which you want to restrict the access.
3. **Action to take:** Select the action of **Allow** or **Deny** to be taken by the IP address(es) you have specified.
4. Click **Apply**.

4.4.4 SNMP Settings

The Simple Network Management Protocol (SNMP) allows you to monitor the status of the GV-Hybrid LPR Camera 10R through SNMP network management software.

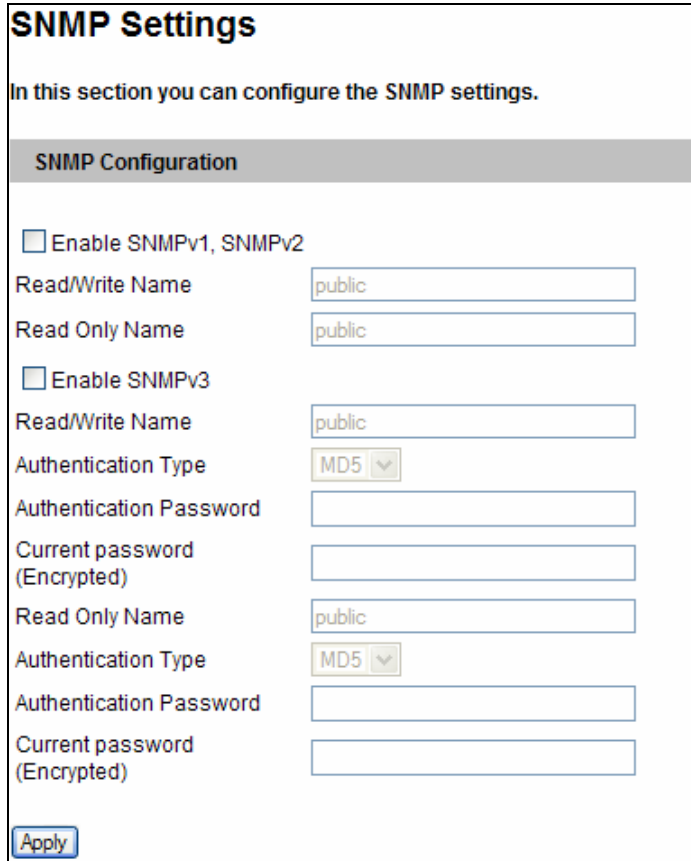

SNMP Settings

In this section you can configure the **SNMP** settings.

SNMP Configuration

☐ Enable SNMPv1, SNMPv2

Read/Write Name:

Read Only Name:

☐ Enable SNMPv3

Read/Write Name:

Authentication Type:

Authentication Password:

Current password (Encrypted):

Read Only Name:

Authentication Type:

Authentication Password:

Current password (Encrypted):

Figure 4-22

To allow management of SNMP software:

1. Select **Enable SNMPv1 SNMPv2c** to enable the function.
2. To enable access to **Read/Write Name**, type a community string. This will serve as a password to allow read and write access to the GV-Hybrid LPR Camera 10R from the SNMP software.
3. To enable **Read Only Name**, type a community string to allow read-only access to the GV-Hybrid LPR Camera 10R from the SNMP software.
4. For a more secured connection, select **Enable SNMPv3** to enable SNMP version 3.
5. To enable access to **Read/Write Name**, type a community string.
6. Select an **Authentication Type** to be used for SNMP requests.

7. Type the **Authentication Password** and **Current Password (Encrypted)**. You will need to type these passwords in the SNMP software to be able to access the GV-Hybrid LPR Camera 10R.
8. To enable access to **Read Only Name**, type a community string to allows read-only access to the GV-Hybrid LPR Camera 10R, and set up the **Authentication Type**, **Authentication Password** and the **Current Password (Encrypted)**.
9. Click **Apply** to save the settings.

4.5 Management

The Management section includes the settings of data and time, GPS Maps and user account. Also you can view the firmware version and execute certain system operations.

4.5.1 Date and Time Settings

The date and time settings are used for date and time stamps on the image.

Date and Time Settings

In this section you can configure time and date or just synchronize with a NTP server.

Date and Time on GV-IPCAM

Mon Aug 27 18:11:35 GMT8:00 2012

Time Zone

(GMT+08:00) China, Hong Kong, Australia Western, Singapore, Taiwan, Russia

☐ Enable Daylight Saving Time

Start (MM/dd/hh/mm)

End (MM/dd/hh/mm)

Synchronized with a Network Time Server

☒ Synchronized with Network Time Server (NTP)

Host name or IP Address: time.windows.com

Update period: 24 hours Update Time: 05 10

Synchronized with your computer or modify manually

☐ Modify manually

Date 2000/01/15 (yyyy/mm/dd)

Time 04:26:54 (hh:mm:ss)

☐ Synchronized with your computer

Date and time overlay setting

Show date as YYYY/MM/DD

(This is a format of date where yyyy stands for year in 4 digits or yy in 2 digits, mm stands for month, and dd stands for day)

Display order

☒ Date prior to time (Ex. 2007/05/21 17:00:00)

☐ Time prior to date (Ex. 17:00:00 2007/05/21)

Apply

Figure 4-23

[Date & Time on GV-IPCAM] Displays the current date and time on the GV-Hybrid LPR Camera 10R.

[Time Zone] Sets the time zone for local settings. Select **Enable Daylight Saving Time** to automatically adjust the GV-Hybrid LPR Camera 10R for daylight saving time. Type the Start Time and End Time to enable the daylight saving function.

[Synchronized with a Network Time Server] By default, the GV-Hybrid LPR Camera 10R uses the timeserver of time.windows.com to automatically update its internal clock every 24 hours. You can change the host name or IP setting to the timeserver of interest. To change the time of automatic update, use the drop-down lists to specify the time.

[Synchronized with your computer or modify manually] Manually changes the camera date and time or synchronize its date and time with those of the local computer.

[Date and time overlay setting] Select the display format of date and time stamps on the image. For this function to work, you must also enable the **Overlaid with date stamps** and **Overlaid with time stamps** options in Figure 4-2.

Note: When connecting to GV-System (V8.5 or later), the Daylight Saving Time of GV-Hybrid LPR Camera 10R can be synchronized automatically with that of GV-System by enabling **Automatically adjust DST** (Configure button < Camera Install < IP Camera Install).

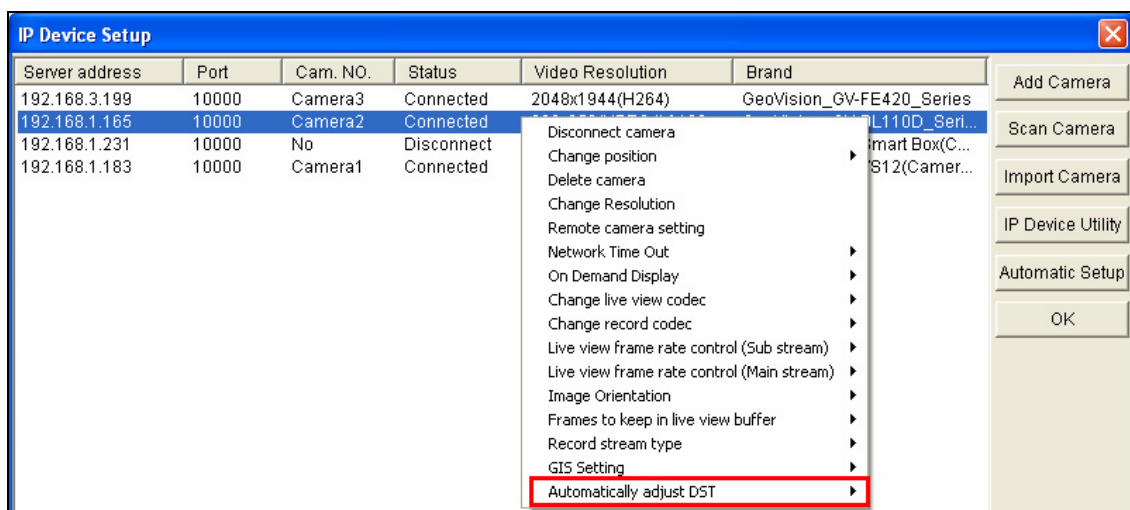


Figure 4-24

4.5.2 GPS Maps Settings

The Maps Settings allows you to see the location of your GV-Hybrid LPR Camera 10R on Google maps, without the need of a GPS device.

To see the location of your GV-Hybrid LPR Camera 10R on maps:

1. It is required to sign up for a Google Maps API key before using the Google Maps. Click **Link to the Google Maps API**.

Link to the Google Maps API'. There are four input fields: 'Google Map API Key' (empty), 'Default Longitude' (121.565773) with a note '(Ex. 121.565=N121.565. -10.25=S10.25)', 'Default Latitude' (25.081961) with a note '(Ex. 25.081=E25.081. -10.25=W10.25)', and 'Location Name' (Taipei 101). At the bottom left is an 'Apply' button." data-bbox="144 263 749 471"/>

Figure 4-25

2. Enter the registered Maps API Key, the longitude and latitude of your camera location, and location name. Click **Apply** to enable this function.
3. Open the control panel of the Live View window.

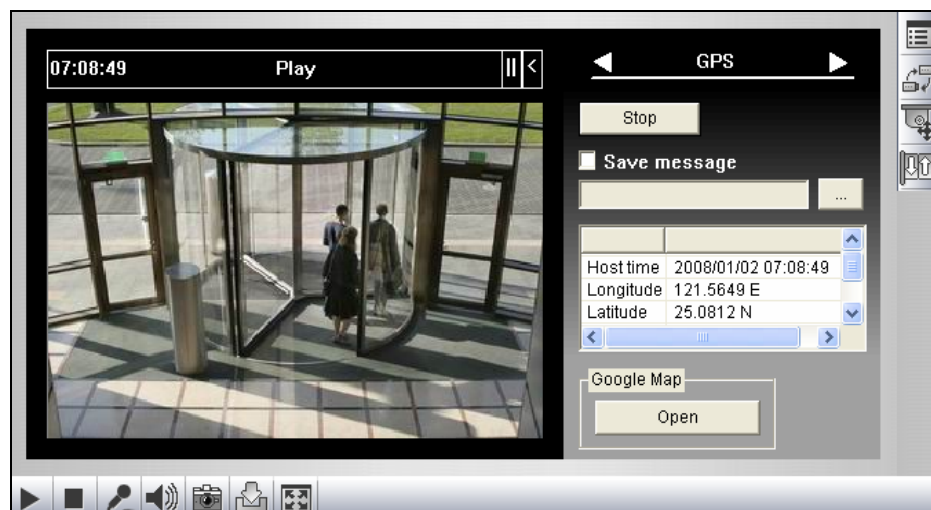


Figure 4-26

- Click **Open**. A warning message appears.

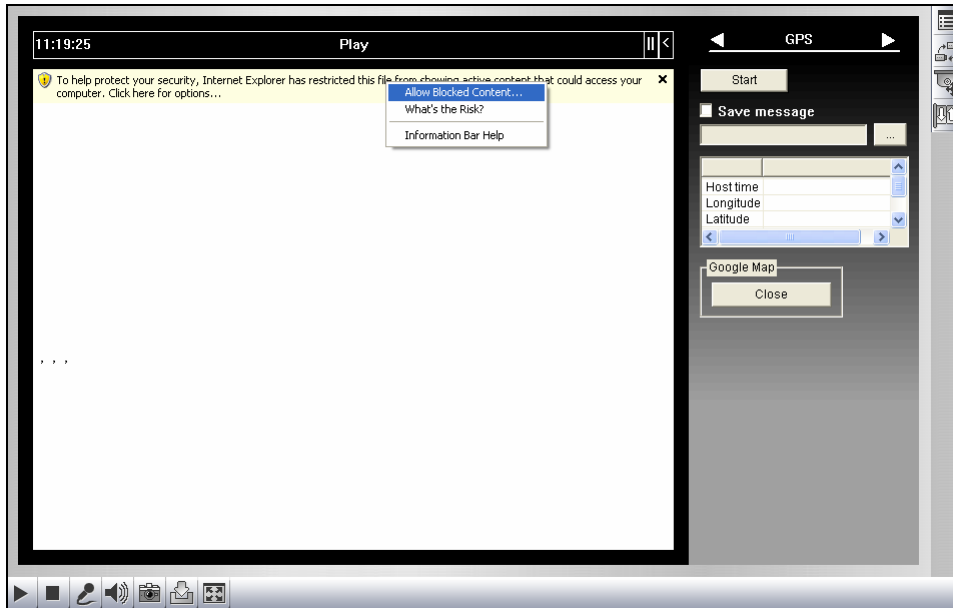


Figure 4-27

- Right-click the warning message and select **Allow Blocked Content**. The map will be displayed. The 📍 icon indicates the location of your camera. In the upper right corner you have options to view different map formats, such as Satellite and Hybrid.



Figure 4-28

4.5.3 User Account

You can change the login name and password of Administrator and Guest accounts.

- The default Administrator login name and password are **admin**.
- The default Guest login name and password are **guest**. To allow a Guest user log in without entering the username and password, select **Disable authentication for guest account**.
- To remain logged in after reboot, select **Disable auto logout after reboot**.

User Account

In this section you can change the administrator account and password

Administrator Account

Username:

Old Password:

New Password:

Confirm Password:

Guest User Account

Username:

Old Password:

New Password:

Confirm Password:

Advanced Setting

☐ Disable authentication for guest account

☐ Disable auto logout after reboot

Figure 4-30

Note: You can also access this User Account interface simply by executing a CGI command. See [Appendix A](#).

4.5.4 Log Information

The log contains dump data that is used by service personnel for analyzing problems.

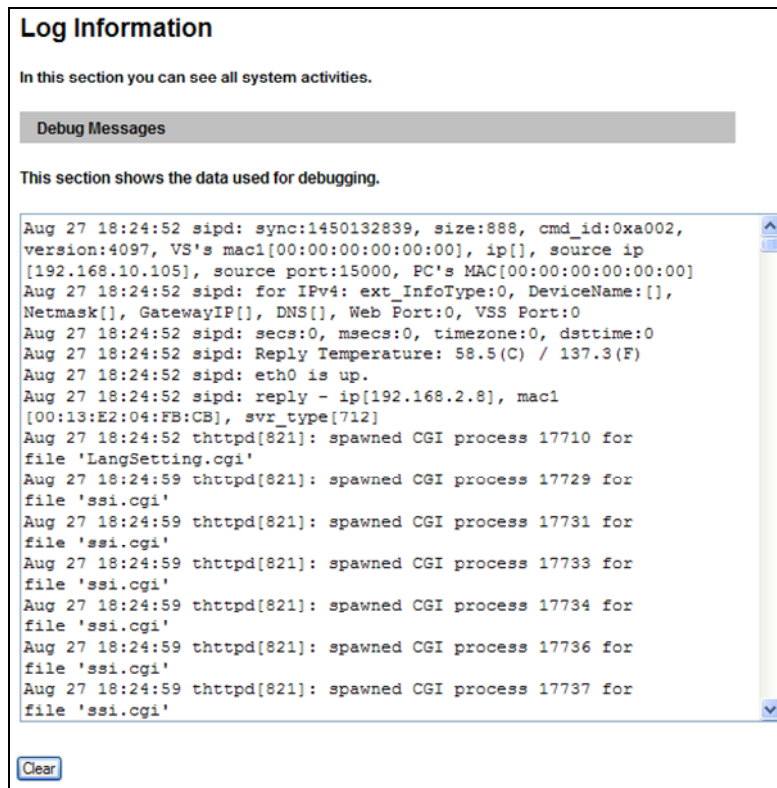


Figure 4-31

4.5.5 Tools

This section allows you to execute certain system operations and view the firmware version.

Additional Tools

In this section you can set the additional tools

Host Settings

In this section you can determine a hostname and camera name for identification.

Host Name

Auto Reboot Setup

In this section you can set the system's auto reboot time.

☐ Enable

Day Interval days

RebootTime :

Firmware Update

In this section you can see GV-IPCAM firmware version.

System Settings

Restore to factory default settings

Internal Temperature

Internal Temperature Normal Range: 0°C ~ 95°C "(32°F ~ 203°F)"

Current chipset temperature inside camera is °C/ °F

Reboot

Do you wish to reboot now?

Figure 4-32

[Host Settings] Enter a descriptive name for the camera.

[Auto Reboot Setup] Select **Enable** to activate automatic reboot and specify the time for reboot in the sub fields below.

- **Day Interval:** Type the day interval between the reboots.
- **Reboot Time:** Use the drop-down list to specify the time for automatic reboot.

[Firmware Update] This field displays the firmware version of the camera.

[System Settings] Click the **Load Default** button to restore the factory default settings.


Note: After applying the default function, the default network connection will be DHCP or fixed IP (**192.168.0.10**) if the router does not support DHCP. Re-configure your network settings if necessary.

[Temperature Status] Displays the current chipset temperature inside the camera.

[Reboot] Click the **Reboot** button to reset the software configuration of the camera.

4.5.6 Language

You can select the language for the Web interface.

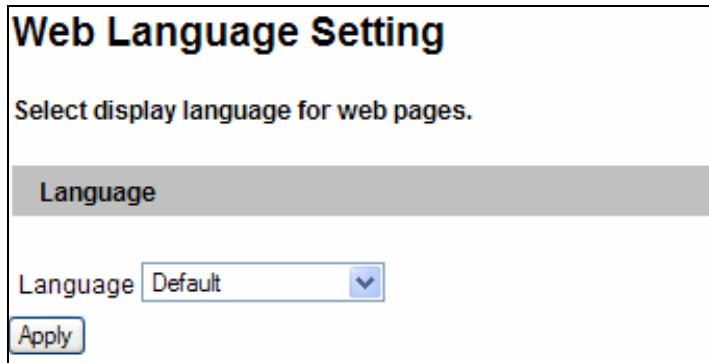

The image shows a web-based configuration window titled "Web Language Setting". Inside the window, there is a heading "Select display language for web pages." Below this heading is a section with a grey header bar labeled "Language". Underneath the header bar, there is a label "Language" followed by a drop-down menu. The drop-down menu currently displays the word "Default" and has a small downward-pointing arrow on its right side. At the bottom left of the window, there is an "Apply" button.

Figure 4-33

Use the Language drop-down list to select a language for the Web interface. By default, the language on the Web interface will be the same with the one used for the operating system.

Chapter 5 Advanced Applications

This chapter introduces more advanced applications.

5.1 Upgrading System Firmware

GeoVision periodically updates the latest firmware to the company website. You can update your camera firmware through the Web interface or GV IP Device Utility included in the Software DVD.

Important Notes before You Start

Before you start updating the firmware, please read these important notes:

1. While the firmware is being updated, the power supply must not be interrupted.

WARNING: The interruption of power supply during updating causes not only update failures but also damages to your camera. In this case, please contact your sales representative and send your device back to GeoVision for repair.

2. Do not turn the power off within 10 minutes after the firmware has been updated.
3. If you use GV IP Device Utility for firmware upgrade, the computer used to upgrade firmware must be under the same network as the GV-Hybrid LPR Camera 10R.
4. Stop monitoring the GV-Hybrid LPR Camera 10R.
5. Stop all the remote connections including Center V2, VSM, ViewLog Server and 3GPP/RTSP.
6. Stop the connection to GV-System.
7. If firmware upgrade fails, you will need to restore the camera to its default settings. For details, see *5.3 Restoring to Factory Default Settings*.

5.1.1 Using the Web Interface

1. In the Live View window, click the **Show System Menu** button (No. 8, Figure 3-2) and select **Remote Config**. This dialog box appears.

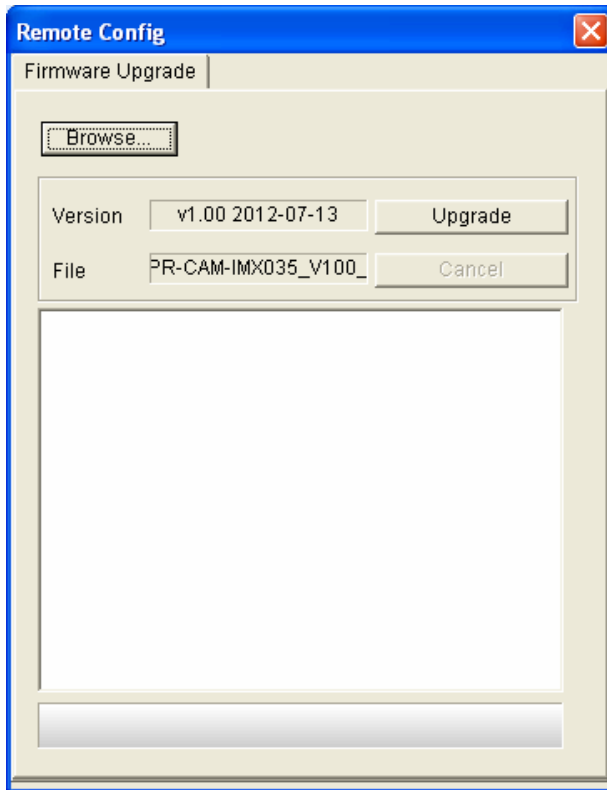


Figure 5-1

2. Click the **Browser** button to locate the firmware file (.img) saved at your local computer.
3. Click the **Upgrade** button to start upgrading.

5.1.2 Using the GV IP Device Utility

The GV IP Device Utility provides a direct way to upgrade the firmware to multiple GV-Hybrid LPR Camera 10R. Note the computer used to upgrade firmware must be under the same network with the cameras.

1. Insert the Software DVD, select **IP Device Utility**, and follow the onscreen instructions to install the program.
2. Double-click the **IP Device Utility** icon created on your desktop. This dialog box appears.

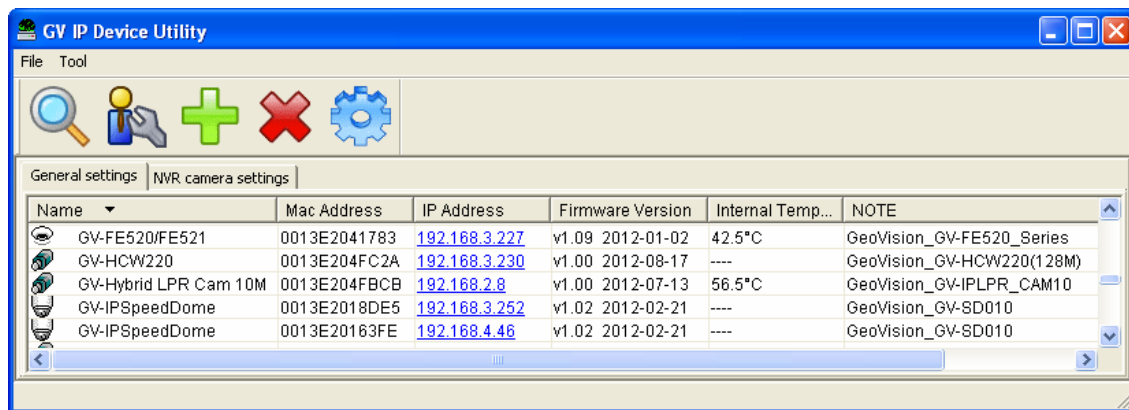


Figure 5-2

3. Click the **Search** button to locate the IP devices on the LAN or click the **New** button and assign the IP address to locate a GV-Hybrid LPR Camera 10R on the network. Or highlight one IP device in the list and click the **Delete** button to remove it.

- Click on the IP address of the GV-Hybrid LPR Camera 10R and select **Configure**. This dialog box appears.

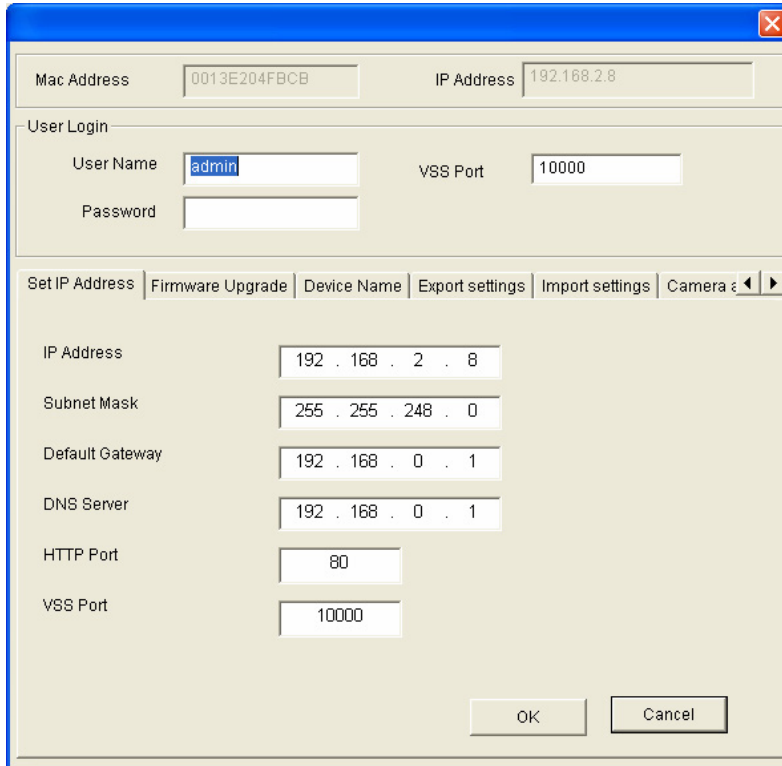


Figure 5-3

- Click the **Firmware Upgrade** tab. This dialog box appears.

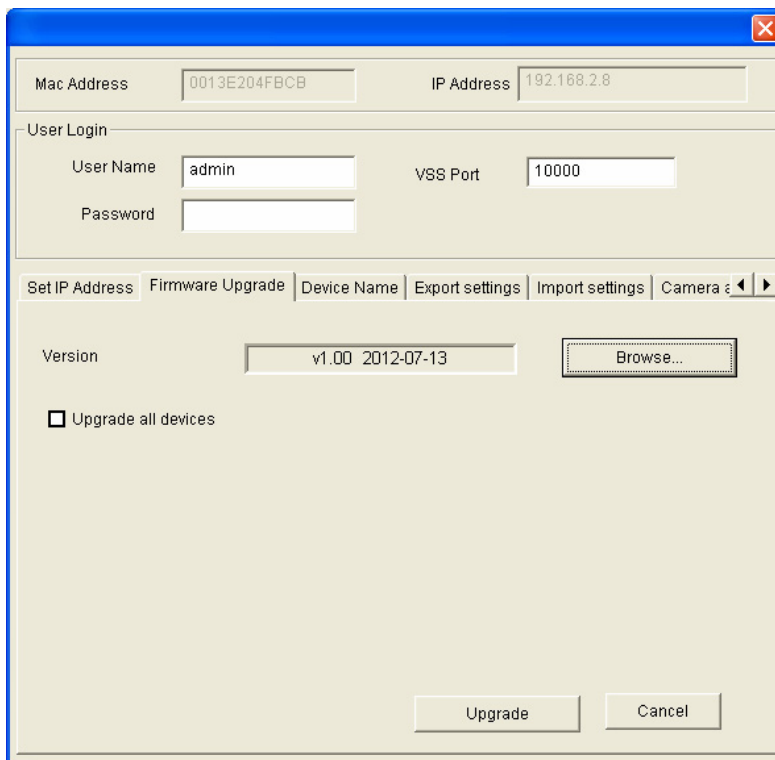


Figure 5-4


5. Click the **Browse** button to locate the firmware file (.img) saved at your local computer.
6. If you like to upgrade all the GV-Hybrid LPR Cameras 10R in the list, check **Upgrade all devices**.
7. Type **Password**, and click **Upgrade** to start the upgrade.

5.2 Backing Up and Restoring Settings

With the GV IP Device Utility included on the Software DVD, you can back up the configurations in the GV-Hybrid LPR Camera, and restore the backup data to the current unit or import it to another unit.

To back up the settings:

1. Run **IP Device Utility** and locate the desired GV-Hybrid LPR Camera 10R. See Steps 1-3 in *5.1.2 Using the IP Device Utility*.
2. Double-click the camera in the list. Figure 5-3 appears.
3. Click the **Export Settings** tab. This dialog box appears.

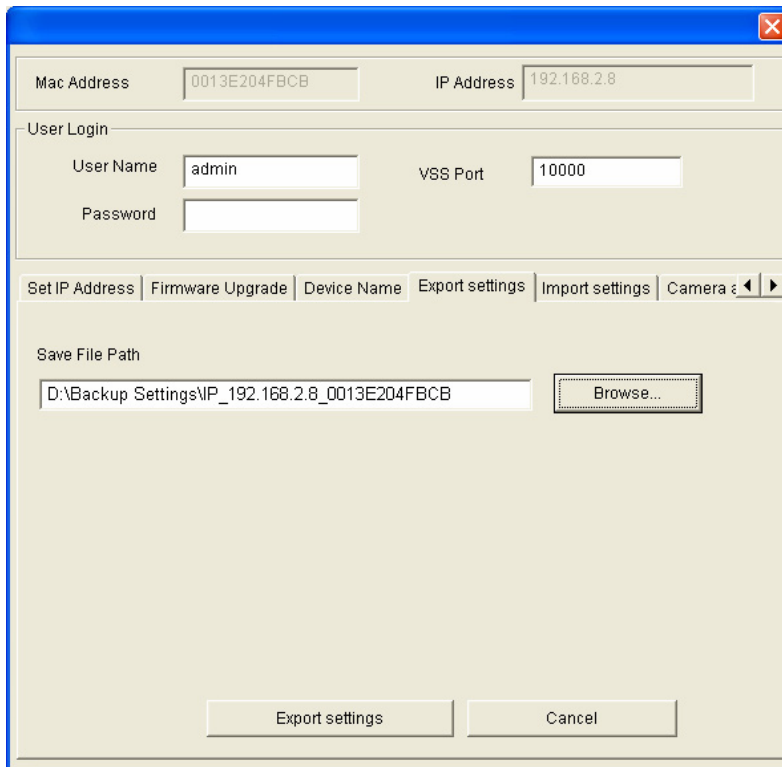

The screenshot shows a Windows-style dialog box titled "IP Device Utility". At the top, there are two text boxes: "Mac Address" containing "0013E204FBCB" and "IP Address" containing "192.168.2.8". Below these is a "User Login" section with "User Name" (admin) and "Password" (empty) fields, and a "VSS Port" field (10000). A tabbed interface is present with tabs: "Set IP Address", "Firmware Upgrade", "Device Name", "Export settings" (selected), "Import settings", and "Camera". Below the tabs is a "Save File Path" section with a text box containing "D:\Backup Settings\IP_192.168.2.8_0013E204FBCB" and a "Browse..." button. At the bottom are two buttons: "Export settings" and "Cancel".

Figure 5-5

4. Click the **Browse** button to assign a file path.
5. Type **Password**, and click **Export Settings** to save the backup file.

To restore the settings:

1. In Figure 5-3, click the **Import Settings** tab. This dialog box appears.

Figure 5-6

2. Click the **Browse** button to locate the backup file (.dat).
3. Select **Upgrade all devices** to import the settings into the same type of device in the same LAN. To import password settings and/or network settings, select **Password Settings** and/or **Network settings**.
4. Click the **Upgrade setting** button to start restoring.

5.3 Verifying Watermark

The watermark is an encrypted and digital signature embedded in the video stream during the compression stage, protecting the video from the moment of creation. Watermarking ensures that an image is not edited or damaged after it is recorded. To enable the watermark function, see *Watermark Setting, 4.1.1 Video Settings*.

The Watermark Proof is a watermark-checking program. It can verify the authenticity of the recording before you present it in court.

5.3.1 Accessing AVI Files

To verify watermark, access the recorded AVI files by one of the following methods:

1. Use the **File Save** function (No. 6, Figure 3-2) to start recording on the local computer.
2. Locate recorded files on the GV-System.

5.3.2 Running Watermark Proof

1. Install **Watermark Proof** from the Software DVD. After installation, a **WMProof** icon is created on your desktop.
2. Double-click the created icon. The Water Mark Proof window appears.
3. Click **File** from the menu bar, select **Open** and locate the recording (.avi). The selected recording is then listed on the window. Alternatively, you can drag the recording directly from the storage folder to the window.
4. If the recording is unmodified, a check mark will appear in the **Pass** column. On the contrary, if the recording is modified or does not contain watermark during recording, a check mark would appear in the **Failed** column. To review the recording, double-click the listed file on the window.

5.3.3 The Watermark Proof Window

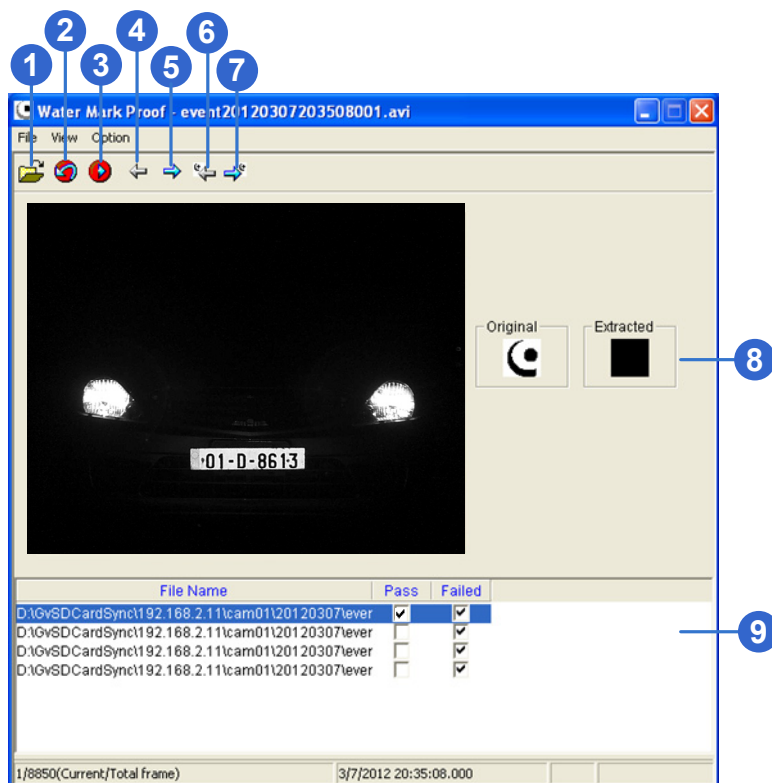


Figure 5-7

The controls in the window:

No.	Name	Description
1	Open File	Opens the recording.
2	First Frame	Goes to the first frame of the file.
3	Play	Plays the file.
4	Previous Frame	Goes to the previous frame of the file.
5	Next Frame	Goes to the next frame of the file.
6	Previous Watermarked Frame	Goes to the previous frame that contains watermark.
7	Next Watermarked Frame	Goes to the next frame that contains watermark.
8	Original vs. Extracted	The Extracted icon should be identical with the Original icon. If not, it indicates the recording has been tampered.
9	File List	Displays the proof results.

Chapter 6 DVR Configurations

The GV-System provides hybrid solution, integrating the digital videos from GV-Hybrid LPR Camera 10R with other analog videos. For digital videos, the GV-System provides the complete video management, such as video viewing, playback, alert settings and almost every feature of the system. The following is the integration specifications:

- GV-System version **8.5.5.0** or later is required.
- The GV-Hybrid LPR Camera 10R allows for up to **10** streams of connection.
- When a GV-Hybrid LPR Camera 10R is connected to IE browser or any other applications, it takes up **1** stream; when it is connected to GV-System, it takes up **2** streams.

Note:

1. The above maximum number of streams is based on the camera's maximum resolution 1280 x 1024 and the codec H.264.
 2. By default, GV-Hybrid LPR Camera 10R is in dual streams and will take up 2 streams when connected to GV-System.
-

- The hardware compression and the "Pre-Recording Using RAM" feature cannot work on the videos from GV-Hybrid LPR Camera 10R. For details about the "Pre-Recording Using RAM" feature, see "System Configuration", Chapter 1, *DVR User's Manual* on the GV-NVR Software DVD.


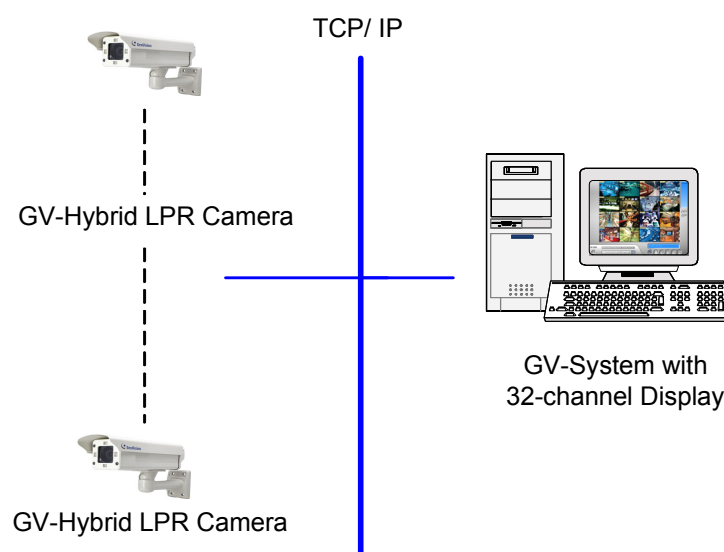


Figure 6-1

The following steps are the example of manual setup.

2. Click **Add Camera**. This dialog box appears.

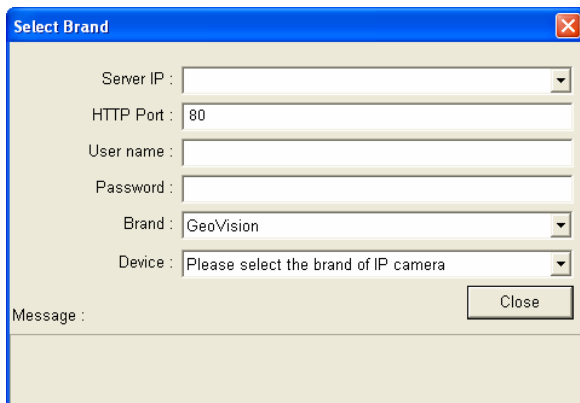


The 'Select Brand' dialog box is shown with the following fields and values:

Field	Value
Server IP :	[Empty]
HTTP Port :	80
User name :	[Empty]
Password :	[Empty]
Brand :	GeoVision
Device :	Please select the brand of IP camera

At the bottom right is a 'Close' button. A 'Message :' label is at the bottom left.

Figure 6-3

3. Type the IP address, username and password of the GV-Hybrid LPR Camera 10R. Modify the default HTTP port if necessary.

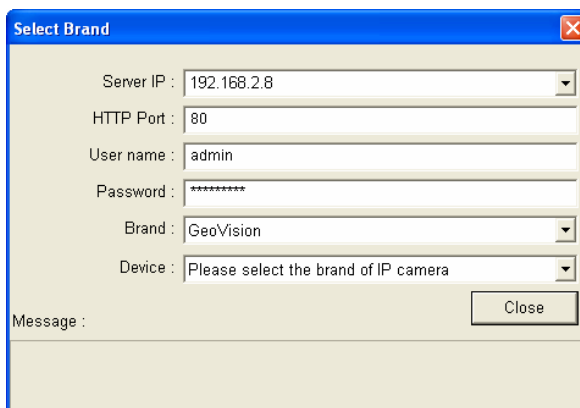

The 'Select Brand' dialog box is shown with the following fields and values:

Field	Value
Server IP :	192.168.2.8
HTTP Port :	80
User name :	admin
Password :	*****
Brand :	GeoVision
Device :	Please select the brand of IP camera

At the bottom right is a 'Close' button. A 'Message :' label is at the bottom left.

Figure 6-4

4. Select **GeoVision** from the **Brand** drop-down list and select **GV-IPLPR_CAM10** from the **Device** drop-down list. This dialog box appears.

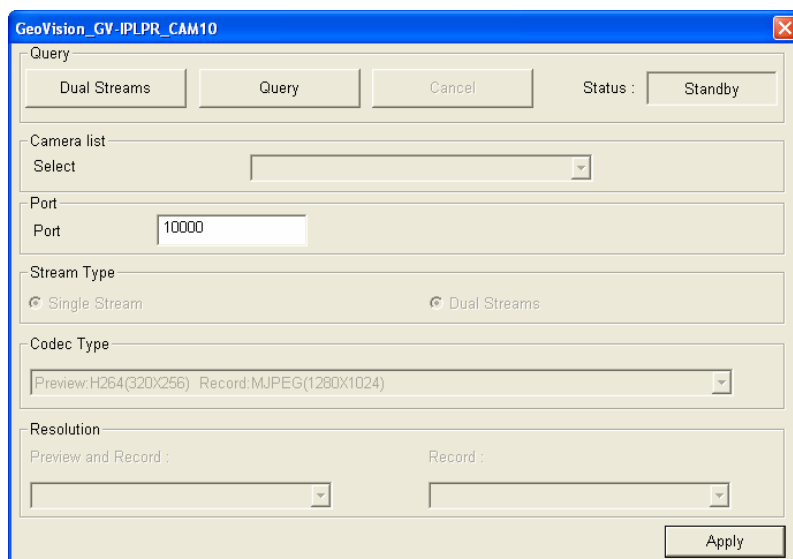


Figure 6-4

- **Dual Streams:** Click this button to set the codec type to MJPEG in the main stream and to H.264 in the sub stream with the resolutions listed below.
 - **Port:** Modify the video streaming port number if necessary.
 - **Stream Number:** Click the **Query** button and select **Single Stream** or **Dual Streams**.
 - **Codec type:** The live view codec and resolution settings are displayed here.
 - **Resolution:** Select resolutions for preview and recording.
5. Click **Apply**. The camera is added to the list.
 6. Click the listed camera, select **Display position** and select a channel number to map the camera to a channel on the GV-System.

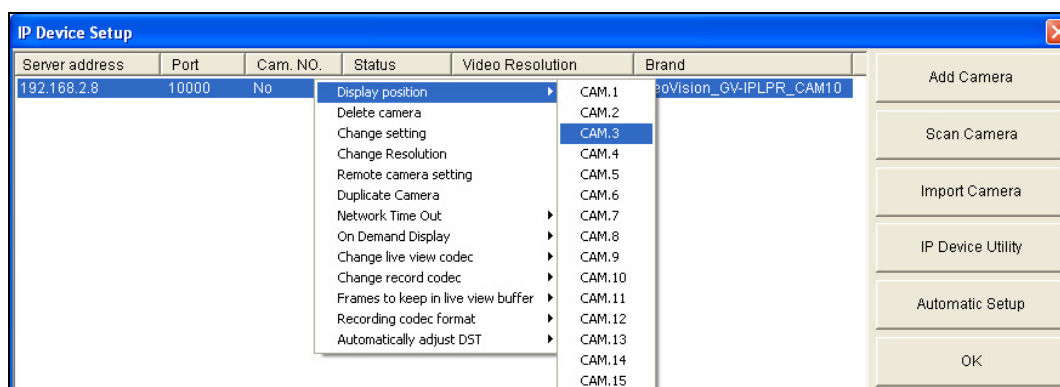


Figure 6-5

7. The Status column now should display "Connected". Click **OK**. The dome view is displayed on the selected channel of GV-System.

6.1.1 Customizing Camera Settings

After the GV-Hybrid LPR Camera 10R is connected and assigned with a display channel, you can configure the camera's settings such as frame rate, codec type and resolution. Right-click the camera to see the following list of options:

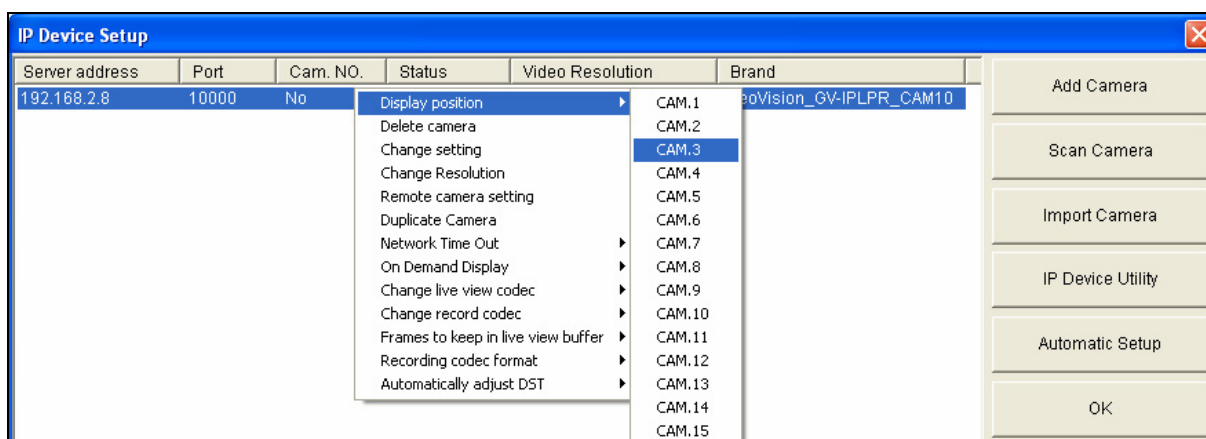


Figure 6-6

- **Change Resolution:** Changes the display ratio, live view resolution and record resolution.
- **Network Time Out:** When network disconnection exceeds the specified time period, the camera status will be displayed as Connection Lost.
- **Change Live View Codec:** Changes the live view codec.
- **Change Record Codec:** Changes the recording codec.
- **Live-view frame rate control (Sub stream):** Sets the live view frame rate of the sub stream to help reduce the CPU usage. If you have set the live view codec to **JPEG**, select the number of frames allowed in a second. If the live view codec is set to **H.264**, select one of the following options:
 - ⊙ **Maximum Live-view Frame Rate:** View the video at the maximum frame rate possible.
 - ⊙ **Live-view Key Frame only:** You can choose to view the key frames of the videos only instead of all frames on the live view. This option is related to the GOP setting of the IP camera. For example, if the GOP value is set to 30, there is only one key frame among 30 frames.
- **Live-view frame rate control (Main stream):** Sets the live view frame rate of the main stream with higher resolution when On Demand function is enabled. Refer to Live-view frame rate control above to see the options available.

- **Image Orientation:** You can adjust the image orientation by selecting **Normal**, **Horizontal Mirror**, **Vertical Flip** or **Rotate 180**.
- **Frames to keep in live view buffer:** Specifies the number of frames to keep in the live view buffer.
- **Recording Codec Format:** Specifies whether to record in standard or GeoVision type of JPEG, H.264 codec.
- **GIS Setting:** Records the video with the GPS data. To record the GPS data, remember to also enable the GIS function of the GV-System (Configure button < Accessories < Enable Local GIS).
- **Automatically Adjust DST:** If enabled, the time on the GV-Hybrid LPR Camera 10R's Web interface will be synchronized with the time of the GV-System when DST period starts or ends on the GV-System.

6.2 Remote Monitoring with Multi View

You can monitor the live view of GV-Hybrid LPR Camera 10R using the Multi View.

Connecting to GV-Hybrid LPR Camera 10R

The Multi View program is available in the GV-System applications, and is also included in the Software DVD as an independent program. The following is an example of running the Multi View through WebCam Server on the GV-System.

1. To enable the remote access to the GV-System, click the **Network** button, select **WebCam Server** to display the Server Setup dialog box, and click **OK** to start the WebCam server.
2. At the local computer, open the Web browser and type the IP address of the GV-System. The Single View page appears.
3. Select **Multi View** and the desired viewing resolution. The valid user name and password are required for login. For the first-time user, you will be directed to the Download page. Install the Multi View program before you can run it.
4. On the Multi View window, click the **Edit Host** button. The Edit Host window appears.
5. To create a host, click the **New** button. You need to create a group before creating a host.

6. Select **GV-IP Camera, GV-IP Speed Dome** from the Device drop-down list. Type the host name, IP address, user name and password of the GV-Hybrid LPR Camera. Modify the default VSS port **10000** if necessary.

The screenshot displays a software interface for configuring a DVR. It is divided into two main sections: 'Host List' on the left and 'Host Information' on the right.

Host List: This section contains a tree view with a folder named 'Office' and a sub-item 'Camera 1'. Below the tree are buttons for 'New', 'Delete', 'Import', and 'Export'.

Host Information: This section contains a 'Host Protection' checkbox (unchecked). Below it is a 'Host Name' field with the value 'Camera 1'. A 'Device' dropdown menu is set to 'GV-IP Camera, GV-IP Sp'. Below this are fields for 'IP Address' (1962.168.7.232), 'User Name' (admin), 'Password' (masked with **), and 'VSS Port' (10000). At the bottom right of this section is a 'Save' button.

At the bottom of the entire window is an 'OK' button.

Figure 6-7

7. Click **Save** to establish connection.

For details on the Multi View functions, see “Multi View Viewer”, Chapter 8, *DVR User’s Manual* on the GV-NVR Software DVD.

6.3 Remote Monitoring with E-Map

You can use the Remote E-Map to monitor the GV-Hybrid LPR Camera.

Creating an E-Map for the GV-Hybrid LPR Camera 10R

With the E-Map Editor, you can create an E-Map for the GV-Hybrid LPR Camera 10R. The E-Map Editor is available in the two applications: Main System and E-Map Server. The following is an example of running the E-Map Editor from the Main System.

1. Go to Windows **Start** menu, point to **Programs**, select **GV folder** and click **E-Map Editor**.
2. To create an E-Map, click the **Add Map** button on the toolbar. A New Map file appears.
3. Double-click the New Map file, and click the **Load Map** button on the toolbar to import a graphic file.
4. To create a host, click the **Add Host** button on the toolbar and select **Add Video Server**.
5. Right-click the created New Host in the Host View, and select **Host Settings**. This dialog box appears.

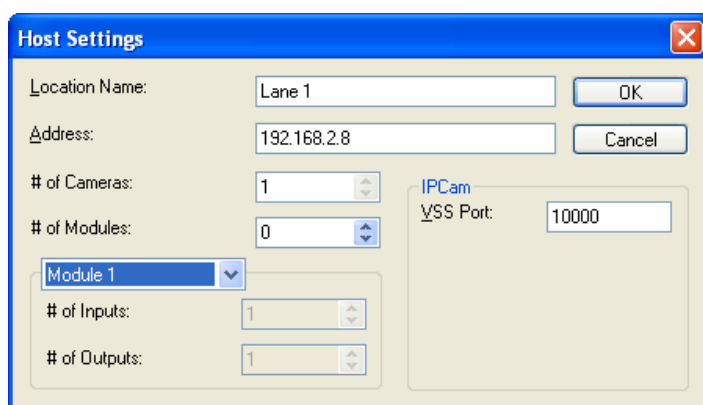


Figure 6-8

6. Give the GV-Hybrid LPR Camera 10R a location name, and type its IP address (or domain name). Keep the default VSS port **10000**, or modify it to match that of the GV-Hybrid LPR Camera 10R.
7. Click **OK** to save the settings.
8. Expand the created host folder. Drag and drop the camera icon onto the imported E-Map.
9. Close the E-Map Editor. Click **Yes** when you are prompted to save the file.

For details on creating an E-Map file on the E-Map Server, see “E-Map Server”, Chapter 9, *DVR User’s Manual* on the GV-NVR Software DVD.

Connecting to GV-Hybrid LPR Camera 10R

Depending on where you save the created E-Map file (GV-System, E-Map Server or Control Center), the steps to open the Remote E-Map window for monitoring may vary slightly. The following is the connection example when you store the E-Map file in the GV-System.

1. To enable the remote access to the GV-System, click the **Network** button, select **WebCam Server** to display the Server Setup dialog box, and click **OK** to start the WebCam server.
2. At the local computer, open the Web browser and type the address of the GV-System. The Single View page appears.
3. Select **Remote eMap**. The valid user name and password are required for login. For the first-time user, you will be directed to the Download page. Install the E-Map program before you can run it.
4. On the Remote E-Map window, click the **Login** button and select the GV-Hybrid LPR Camera 10R host to access its videos. The valid user name and password are required to log in the camera.

For details on the Remote E-Map functions, see “The Remote E-Map Window”, Chapter 9, *DVR User’s Manual* on the GV-NVR Software DVD.

Chapter 7 CMS Configurations

This section introduces the related settings to enable connecting to the GV-Hybrid LPR Camera 10R in the central monitoring stations Center V2 and VSM and Dispatch Server.

7.1 Center V2

The Center V2 can monitor the GV-Hybrid LPR Camera 10R.

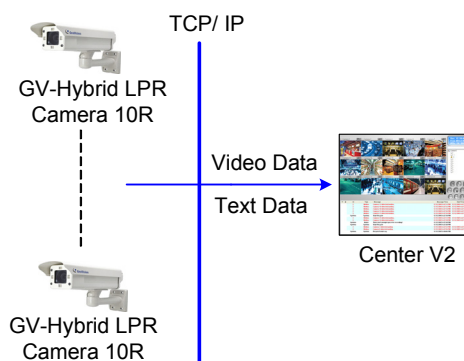


Figure 7-1

- To set the appropriate port connecting to the GV-Hybrid LPR Camera 10R, click the **Preference Settings** button, select **System Configure**, click the **Network** tab, and check **Accept connections from GV-Compact DVR, Video Server & IP Cam**. Keep the default port **5551** for the Port 2 option, or modify it to match the Center V2 port on the GV-Hybrid LPR Camera 10R.

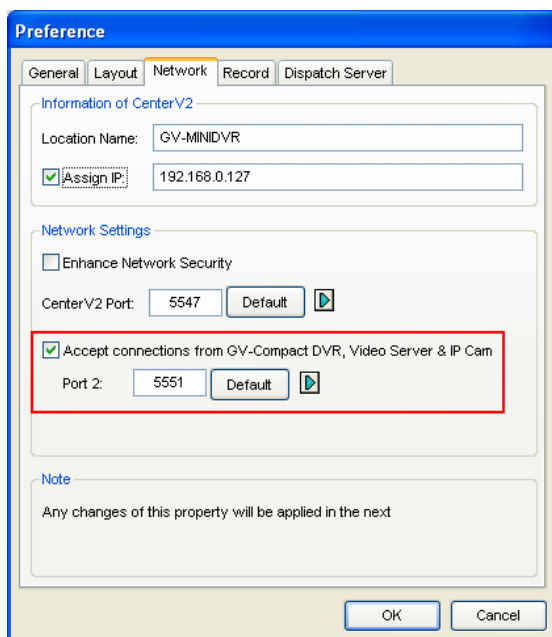


Figure 7-2

- To define how to display the received video on motion detection, click the **Preference Settings** button and select **System Configure**. This dialog box appears.

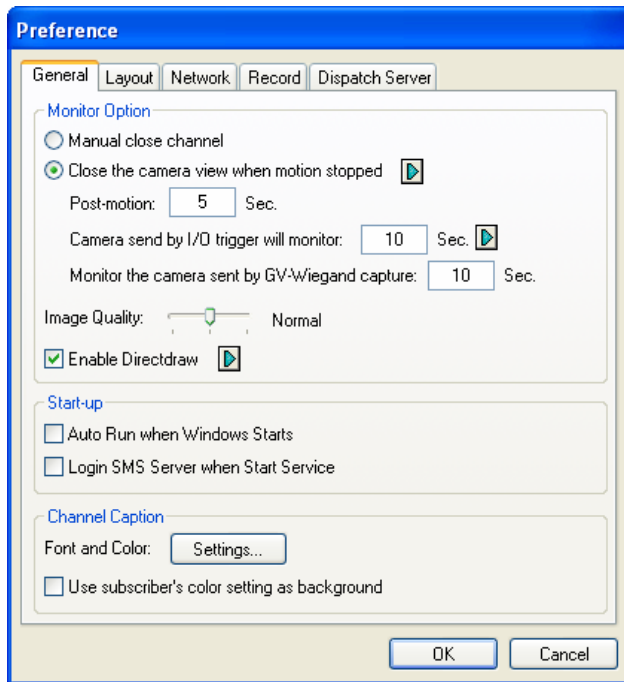


Figure 7-3

- **Manual close channel:** Closes the triggered camera view manually.
- **Close the camera view when motion stopped:** Closes the triggered camera view automatically when motion stops.
- **Post Motion:** Specify the duration of the camera view remaining on the monitoring window after motion stops.
- **Camera send by I/O trigger will monitor:** This feature is not functional for GV-Hybrid LPR Camera 10R.

For further information on how to manage the received video from the GV-Hybrid LPR Camera 10R, see *GV-CMS Series User's manual*.

7.2 VSM

The VSM can monitor the GV-Hybrid LPR Camera 10R.

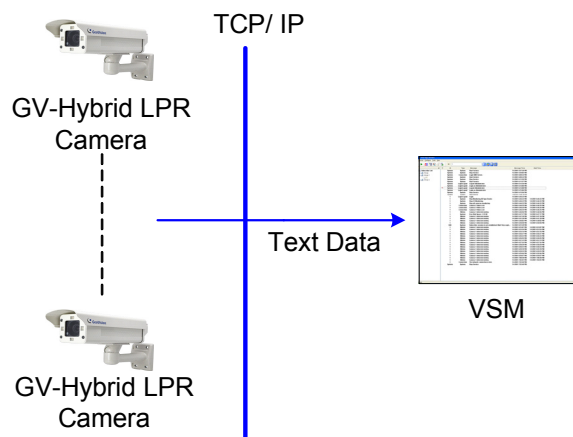


Figure 7-4

- To set the appropriate port connecting to the GV-Hybrid LPR Camera 10R, click **Configure** on the window menu, and select **System Configure** to display this dialog box. In the Connective Port field, keep the default value **5609** for the Port 2 option, or modify it to match the VSM port on the GV-Hybrid LPR Camera 10R.

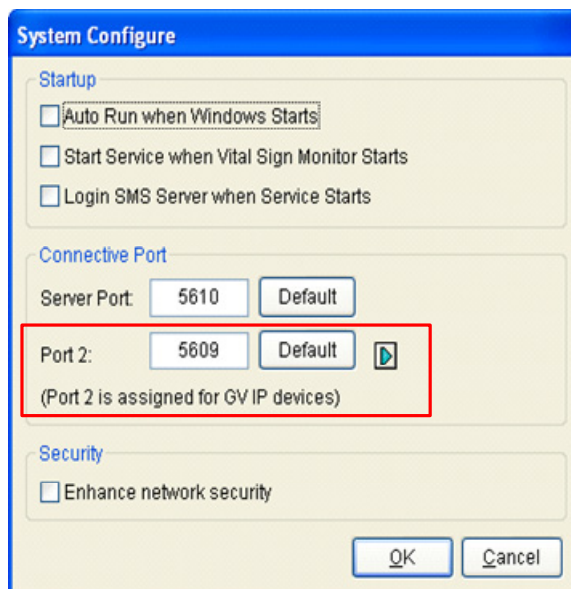


Figure 7-5

For further information on how to manage the received video from the GV-Hybrid LPR Camera 10R, see *GV-CMS Series User's manual*.

7.3 Dispatch Server

The Dispatch Server can manage the GV-Hybrid LPR Camera 10R, and distribute them to the Center V2.

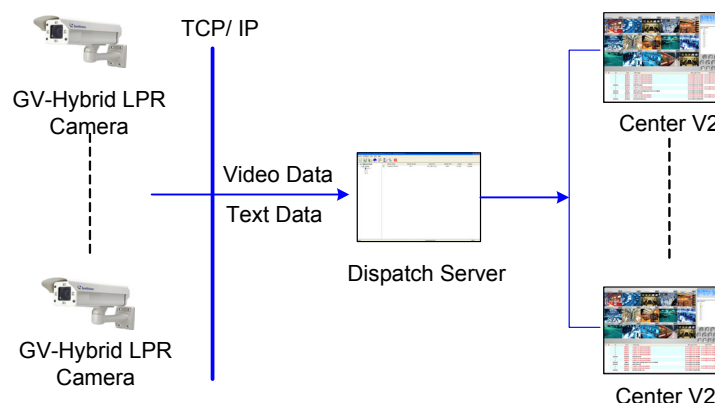


Figure 7-6

- To enable connecting to the GV-Hybrid LPR Camera 10R, click the **Server Setting** button on the toolbar, and enable **Allow GV IP devices to login as subscriber from Port**. Keep the default port **5551**, or modify it to match the Center V2 port on the GV-Hybrid LPR Camera 10R.

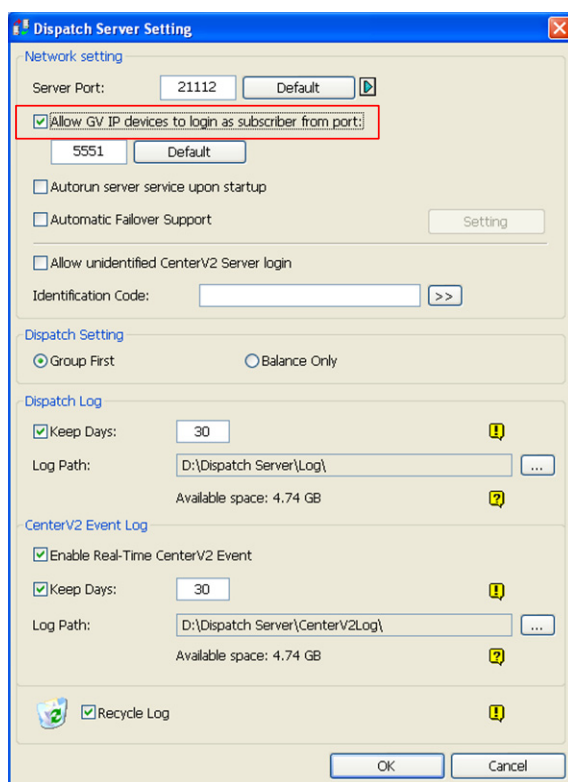


Figure 7-7

For further information on how to manage the received video from the GV-Hybrid LPR Camera 10R, see *GV-CMS Series User's manual*

Chapter 8 Smart Device Connection

Using Android or Apple smart devices, you can receive live video streaming from the GV-Hybrid LPR Camera 10R. The charts below list the GV mobile applications supporting the GV-Hybrid LPR Camera 10R.

Smart Device View	OS Supported	Default Port
GV-Eye (HD) V1.2.0	Android V2.2 to 4.0.4 iOS 4.3.3 to 5.1	VSS Port: 10000

Chart 1

Note: The users of GV-Hybrid LPR Camera 10R can access the camera live view via these mobile applications. The remote playback function is not available.

Supported Resolution and Codec	
Smart Device View	GV-Eye V1.2.0 (HD)
MJPEG	1920 x 1080 or below
H.264	

8.1 Android

Download GV-Eye from Android Market and install the application. The GV-Eye icon will appear on the desktop.

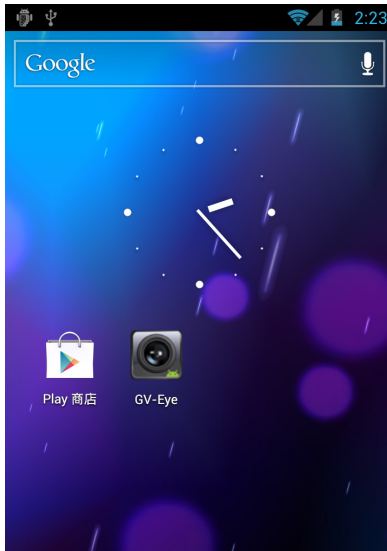


Figure 8-1

8.1.1 Connecting to GV-Hybrid LPR Camera 10R

1. Tap the **GV-Eye** icon  on you device, and then this page appears.

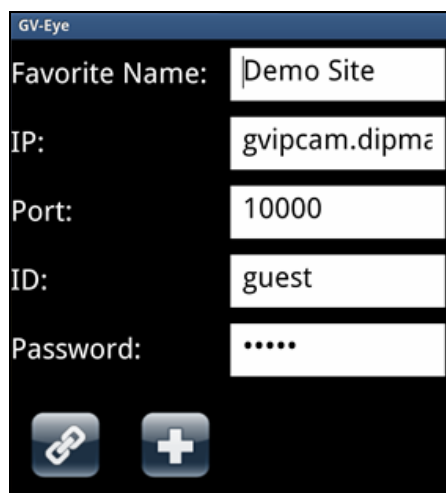


Figure 8-2

2. Type the IP address, port number (default value is 10000), user name and password of the GV-IP devices you want to access. And then tap the **Add** button  to save the connection information in the address book.

3. Tap the created link in the address book.

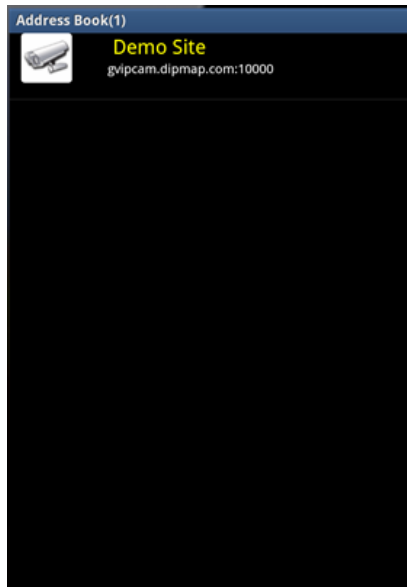


Figure 8-3

4. Tap the **Connection** button  to access the GV-IP devices.

8.1.2 Accessing Live View

You can press the Menu button on the mobile phone to see or hide the connection information.

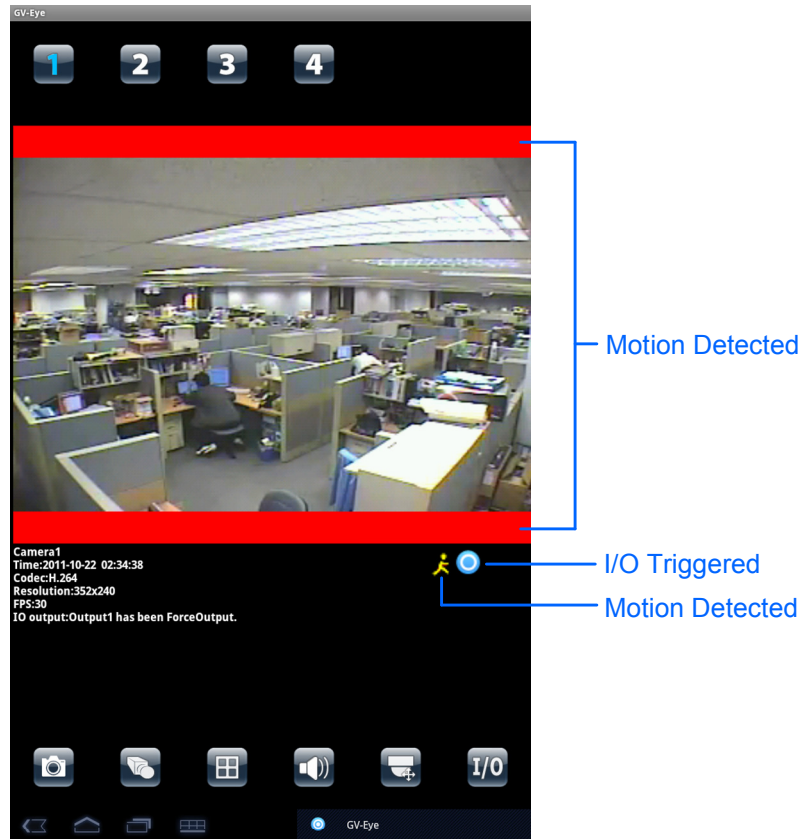


Figure 8-4

The following function buttons are available:

Icon	Name	Function
	Channel number	Switches to a different channel. You can drag across the numbers to see more channels. This function is only supported by GV-Video Server and GV-Compact DVR.
	Snapshot	Saves the current image in the mobile device
	Dual Streams	Switches between the video streams if the GV-IP device supports dual streams.
	Screen division	Displays up to four channels on the same page if the GV-IP device supports multiple channels. This function is only supported by GV-Video Server and GV-Compact DVR.


Icon	Name	Function
	Audio	Enables or disables the audio function. G.711 and G.723 audio codec are supported.
	PTZ Control	Enables the PTZ function. A message will appear asking if you want to use Gesture Detector to control PTZ. Tap OK if you want to be able to drag across the live view screen to control the PTZ function in addition to using the PTZ control buttons on the bottom of the screen. : Moves the camera toward different directions. : Moves the camera back to Home position. : Zooms in and out. : Adjusts the focus. : Auto adjusts focus. : Adjusts the iris. : Moves the camera to a preset point by typing the preset number. : See more PTZ function buttons. : Exits the PTZ mode.
	I/O Device	Tap a number to force the output device to be triggered. The I/O icon  will appear briefly when I/O is triggered.

Note:


- The PTZ control and I/O device functions are only accessible on devices with PTZ control and I/O devices.
- The default live view is stream 2, limited to **Admin** users only in GV-Eye V1.2.0.

8.2 Apple

Download GV-Eye / HD from **App Store** and install the application. The **GV-Eye / GV-EyeHD** icon will appear on the desktop.

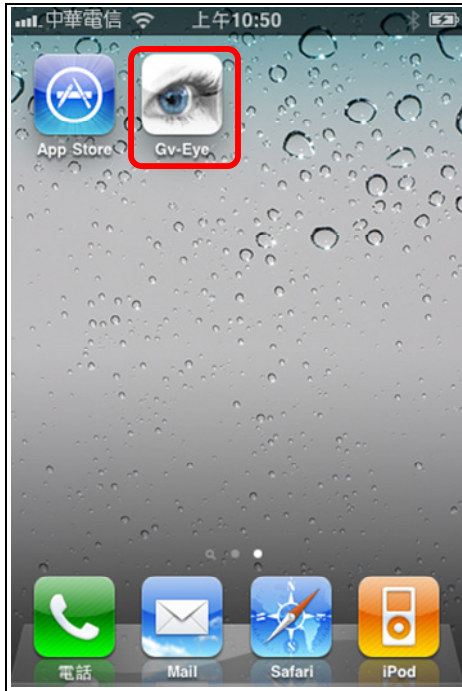

GV-Eye icon on iPhone / iPod Touch

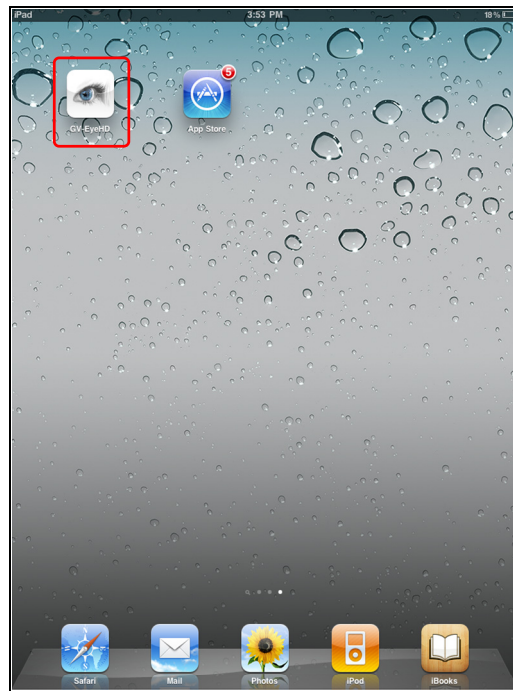

GV-Eye HD icon on iPad

Figure 8-5

8.2.1 Connecting to GV-Hybrid LPR Camera 10R

To connect your iPhone, iPod Touch or iPad to the GV-Hybrid LPR Camera 10R, follow these steps:

1. Click the **GV-Eye** icon  on the desktop of your phone. The welcome page appears.
2. Tap the **Add** button . This page appears.



Figure 8-6

3. Enter the Host name, Domain/IP address, port number (default value is 10000), username and password to log in to the GV-Hybrid LPR Camera 10R.
4. Tap the **Save** button. The camera is now added to the IPCam list and will be available the next time you access GV-Eye. You can tap the **Edit** button and then select a GV-Hybrid LPR Camera 10R to edit existing device login information.

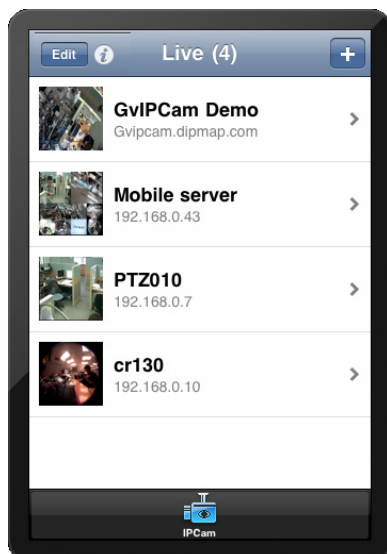


Figure 8-7

8.2.2 Accessing Live View

You can tap the information button  at the top-right corner to see the connection information.

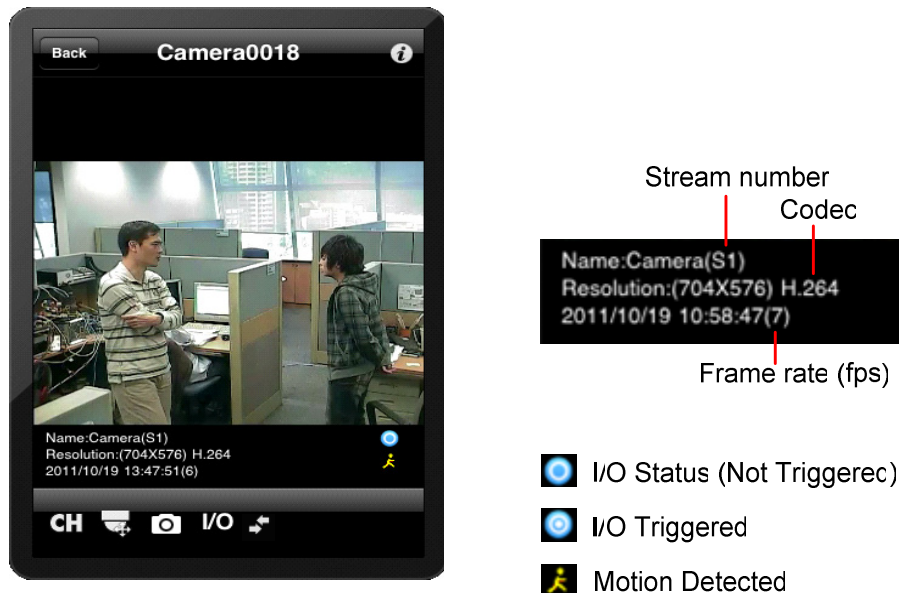


Figure 8-8

The buttons below are available when the iPhone, iPod Touch or iPad is positioned vertically.

Icon	Name	Function
	Screen division	Displays up to four channels on the same page if the GV-IP device supports multiple channels.
	PTZ control	Enables PTZ control. Drag across the camera live view screen to adjust the camera position. The following buttons are available:  : Zooms in and out.  : Adjusts the focus. : Moves the camera back to Home position.  : Adjusts the iris. (GV-SD010 only) : Moves the camera to a preset point by typing the preset number.
	Snapshot	Saves the current image in the mobile device.
	I/O Device	Tap a number to force the output device to be triggered. The I/O icon  will be highlighted briefly when I/O is triggered.
	Stream change	Switch the live view streams.

Note:

1. The PTZ control and I/O device functions are only accessible on devices with PTZ control and I/O devices.
 2. The default live view is stream 2, limited to **Admin** users only in GV-Eye (HD) V1.2.0.
-

Specifications

Camera		
Image Sensor		1/2.7" B/W progressive scan CMOS
Picture Elements		1280 (H) x 1024 (V)
Shutter Speed		Automatic, Manual (1/500 ~ 1/8000 sec)
White Balance		Auto / Manual (2800K ~ 8500K)
S/N Ratio		50 dB
Lens		
Megapixel		Yes
Lens Type		Varifocal
Focal Length		5 ~ 50 mm
Maximum Aperture		F/1.6
Mount		CS
Image Format		1/2.7"
Operation	Focus	Manual (w/lock)
	Zoom	Manual (w/lock)
	Iris	DC drive
IR LED Quantity		4 high power IR LEDs
IR Distance		6 m ~ 12 m
Max. Torque (Focus / Zoom Screws)		0.049 N.m
Operation		
Video Compression		H.264, MJPEG
Video Stream	Stream 1 from H.264 and MJPEG	
	Stream 2 from H.264 and MJPEG	
Frame Rate		30 fps at 1280 x 1024 *The frame rate and the performance may vary depending on the number of connections and data bitrates (different scenes)
Image Setting		Brightness, Contrast, Saturation, Sharpness, Gamma, White Balance, Image Orientation, Shutter Speed

Audio Compression		G.711, AAC (16 kHz / 16 bit) *AAC is only supported by GV-System V8.5 or later
Two-Way Audio		Yes
Video Resolution		
Main Stream	4:3	1280 x 960, 640 x 480, 320 x 240
	16:9	1280 x 720, 640 x 360, 448 x 252
	5:4	1280 x 1024, 640 x 512, 320 x 256
Sub Stream	4:3	640 x 480, 320 x 240
	16:9	640 x 360, 448 x 252
	5:4	640 x 512, 320 x 256
TV-Out		NTSC, PAL
Network		
Interface		10/100 Base-T Ethernet, RJ-45 connector
Protocol		HTTP, HTTPS, TCP, UDP, SMTP, FTP, DHCP, NTP, UPnP, DynDNS, 3GPP/ISMA, RTSP, PSIA, SNMP, QoS (DSCP)
Mechanical		
Lens Mounting		CS-Mount
Temperature Detector		Yes
Camera Angle Adjustment	Pan	0° ~ 330°
	Tilt	0° ~ 90°
Connectors	Power	PoE
	Ethernet	RJ-45
	Audio	1 In (externally connecting a microphone) 1 Out (Stereo phone jack, 3.5 mm / 0.14 in)
	Auto Iris	DC Drive
	TV-Out	BNC connector (640 x 480 resolution) *The TV-Out function only works in 640 x 480 resolution. For TV-Out to work properly, you must set the video resolution to 1280 x 1024 or lower. If both streams are enabled, the Sub Stream must be set to 640 x 480.
LED Indicator		1 LED (Status)

General		
Operating Temperature		-40°C ~ 50°C / -40°F ~ 122°F
Humidity		10% ~ 90% (non-condensing)
Power Source		PoE (IEEE802.3at++)
Max. Power Consumption		48 W
Dimensions	Camera Body	100.5 x 100.5 x 317.5 mm / 3.96 x 3.96 x 12.5 in
	Cable Length	1 m / 3.28 ft
	Max. Cable Diameter	ø 7.1 mm / 0.28 in
	Max. Connector Diameter	ø 25.2 mm / 0.99 in
Weight		3.22 kg / 7.05 lbs
Protection Classification		IP66
Heater		On: 7°C/44.6°F; Off: 8°C/46.4°F
Fan		Constantly On
Regulatory		CE, FCC, C-Tick, RoHS compliant
Power over Ethernet		
PoE Standard		IEEE 802.3at++ Power over Ethernet / PD
PoE Power Supply Type		End-Span
PoE Power Output		DC 48V, 600mA (34.2W Max.)
Web Interface		
Installation & Management		Web-based configuration
Firmware Upgrade		Remote upgrade through Web Browser IP Device Utility included in the Software DVD
Access from Web Browser		Camera live view, video recording, change video quality, bandwidth control, image snapshot, audio, Picture in Picture, Picture and Picture, Privacy Mask, Tampering Alarm, Text Overlay
Language		Arabic / Bulgarian / Czech / Danish / Dutch / English / Finnish / French / German / Greek / Hebrew / Hungarian / Indonesian / Italian / Japanese / Lithuanian / Norwegian / Persian / Polish / Portuguese / Romanian / Russian / Serbian / Simplified Chinese / Slovakian / Slovenian / Spanish / Swedish / Thai / Traditional Chinese / Turkish

Applications	
Network Storage	GV-NVR, GV-System, GV-Recording Server
Smart Device Access	- GV-Eye for Android Smartphone, Tablet, iPhone and iPod Touch - GV-Eye HD for iPad
Live Viewing	IE , GV-MultiView
CMS Server support	GV-Control Center, GV-Center V2, GV-VSM
GV-PA481	
PoE Standard	IEEE 802.3at Power over Ethernet / PoE Adapter
PoE Power Output	DC 48V, 1A (48W Max.)
Ethernet Cable Length	Max 10 m / 32.8 ft from GV-PA481 to IP device, CAT5
Power Input	DC 48V, 1A
Operation Temperature	-40°C ~ 50°C / -40°F ~ 122°F
Dimensions (L x W x H)	138 x 104 x 38 mm / 5.43 x 4.09 x 1.5 in
Weight	610 g / 13.42 lbs
Note: 1. All specifications are subject to change without notice. 2. The GV-Hybrid LPR Camera 10R is designed for vehicles traveling at 120 km/hr (74.6 mph) or less and with reflective license plates only.	

Appendix

A. The CGI Command

With GV-Hybrid LPR Camera 10R, you can obtain a snapshot of the live view or access the User Account Web interface simply by executing CGI commands. For a GV-Hybrid LPR Camera 10R with the following details:

IP address: 192.168.2.11

Username: admin

Password: admin

Desired Stream: 1

- To obtain a snapshot of live view, type the following into your Web browser:

<http://192.168.2.11/PictureCatch.cgi?username=admin&password=admin&channel=1>

- To access the User Account settings on the Web interface, type the following into your Web browser:

<http://192.168.2.11/ConfigPage.cgi?username=admin&password=admin&page=UserSetting>

B. RTSP Protocol Support

The GV-Hybrid LPR Camera 10R supports RTSP protocol for both video and audio streaming. For RTSP command, enter:

rtsp://<IP of the GV-Hybrid LPR Camera 10R:8554/<CH No.>.sdp

For example, rtsp://192.168.3.111:8554/CH001.sdp

Note:

1. The RTSP streaming provides source video images of 352 x 240 / 352 x 288 only.
 2. The RTSP server must be enabled on the Web interface. See Figure 4-13.
 3. Only VLC and QuickTime players are supported for streaming video via RTSP protocol.
-

C. Settings for Internet Explorer 8

If you use Internet Explorer 8, it is required to complete the following setting.

1. Set the Security to **Medium-high (default)**.
2. Enable **Allow previously unused ActiveX controls to run without prompt**.
3. Disable **Only allow approved domains to use ActiveX without prompt**.

